

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC650LC-11***

SERIAL NUMBERS 80001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-20
Foreword, Safety, Basic Information .....	00-23
How to Read the Shop Manual .....	00-23
Safety Notice for Operation .....	00-25
Precautions to Prevent Fire .....	00-33
Procedures If Fire Occurs .....	00-35
Precautions for Disposing of Waste Materials .....	00-36
Procedures for Exhaust Gas Regulations .....	00-37
Precautions for DEF .....	00-38
Store DEF .....	00-39
Precautions When You Handle Hydraulic Equipment .....	00-40
Precautions When You Disconnect and Connect Pipings .....	00-43
Precautions When You Handle Electrical Equipment .....	00-50
Precautions When You Handle Fuel System Equipment .....	00-52
Precautions When You Handle Intake System Equipment .....	00-53
Practical Use of KOMTRAX .....	00-54
Disconnect and Connect Push-Pull Type Coupler .....	00-55
Precautions for Disconnection and Connection of Connectors .....	00-59
How to Disconnect and Connect Deutsch Connector .....	00-63
How to Disconnect and Connect Slide Lock Type Connector .....	00-64
How to Disconnect and Connect Connector with Lock to Pull .....	00-66
How to Disconnect and Connect Connector with Lock to Push .....	00-67
How to Disconnect and Connect Connector with Housing to Rotate .....	00-69
How to Read the Codes for Electric Cable .....	00-70
Explanation of Terms for Maintenance Standard .....	00-74
Standard Tightening Torque Table .....	00-77
Conversion Table .....	00-84
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-5
Specifications .....	01-6
Weight Table .....	01-9
Table of Fuel, Coolant, and Lubricants .....	01-11
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-11
Function of Urea SCR System .....	10-12
Component Parts of Urea SCR System .....	10-21
Boot-up System .....	10-30
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-30
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-31
System Operating Lamp System .....	10-32
Battery Disconnect Switch .....	10-35
Engine System .....	10-36
Layout Drawing of Engine System .....	10-36
Engine Control System .....	10-38
Auto-Deceleration System .....	10-44
Automatic Low Idle System .....	10-46
Engine Automatic Warm-up System .....	10-48
Overheat Prevention System .....	10-51
Turbocharger Protection System .....	10-53

Automatic Idle Stop System .....	10-55
Component Parts of Engine System .....	10-59
Cooling System.....	10-78
Layout Drawing of Cooling System .....	10-78
Fan Speed Control System of Hydraulic Fan .....	10-80
Engine Output Control System of Hydraulic Fan .....	10-82
Fan Reverse Rotation System of Hydraulic Fan.....	10-84
Component Parts of Cooling System .....	10-85
Control System .....	10-100
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-100
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-102
Machine Monitor System.....	10-104
KomVision System.....	10-107
KOMTRAX System .....	10-112
Component Parts of Control System .....	10-114
Hydraulic System .....	10-159
Layout Drawing of Hydraulic System.....	10-159
OLSS .....	10-162
Engine and Pump Combined Control System .....	10-175
Component Parts of Hydraulic System.....	10-180
Work Equipment System.....	10-234
Layout Drawing of Work Equipment System .....	10-234
One-Touch Power Maximizing System .....	10-240
Machine Push-up System .....	10-242
Boom Shockless Control Function .....	10-244
PPC Lock System.....	10-245
Work Equipment and Travel Automatic Lock System .....	10-246
Component Parts of Work Equipment System .....	10-248
Swing System .....	10-260
Layout Drawing of Swing System.....	10-260
Swing Control System Diagram .....	10-263
Component Parts of Swing System.....	10-267
Travel System .....	10-282
Layout Drawing of Travel System.....	10-282
System Diagram of Travel Control System.....	10-286
Component Parts of Travel System.....	10-289
Undercarriage and Frame .....	10-310
Layout Drawing of Undercarriage.....	10-310
Work Equipment .....	10-311
Structure of Work Equipment .....	10-311
Function of Work Equipment.....	10-312
Work Equipment Clearance Adjustment Shim.....	10-313
Bucket Clearance Adjustment Shim .....	10-314
CAB Related Parts.....	10-315
CAB .....	10-315
CAB Mount .....	10-316
CAB Tipping Stopper .....	10-317
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC650LC-11 .....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: PC650LC-11.....	20-8
Machine Posture and Procedures to Measure Performance .....	20-25
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Related Information on Testing and Adjusting .....	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$