

# Shop Manual

HYDRAULIC  
EXCAVATOR

# PC70-8

SERIAL NUMBERS C10001 and up

**ecot3**

**KOMATSU**



---

# HYDRAULIC EXCAVATOR

## PC70-8

Machine model	Serial number
PC70-8	C10001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN06204-C1
00 Index and foreword .....	SEN06206-01
100 Index .....	SEN06207-01 ●
200 Foreword and general information .....	SEN06208-00
01 Specification .....	SEN06209-01
100 Specification and technical data .....	SEN06210-01 ●
10 Structure, function and maintenance standard .....	SEN06211-01
100 Engine and cooling system .....	SEN06212-00
200 Power train .....	SEN06213-00
300 Undercarriage and frame .....	SEN06214-00
401 Hydraulic system, Part 1 .....	SEN06215-01 ●
402 Hydraulic system, Part 2 .....	SEN06216-00
403 Hydraulic system, Part 3 .....	SEN06217-00
500 Work equipment .....	SEN06218-00
600 Electrical system .....	SEN06219-01 ●
20 Standard value table .....	SEN06220-00
100 Standard service value table .....	SEN06221-00
30 Testing and adjusting .....	SEN06222-01
101 Testing and adjusting, Part 1 .....	SEN06223-01 ●
102 Testing and adjusting, Part 2 .....	SEN06224-01 ●
103 Testing and adjusting, Part 3 .....	SEN06225-01 ●
40 Troubleshooting .....	SEN06226-01
100 Failure code table and fuse locations .....	SEN06227-01 ●
200 Related information on troubleshooting .....	SEN06228-00
301 Troubleshooting by failure code, Part 1 .....	SEN06229-00
302 Troubleshooting by failure code, Part 2 .....	SEN06230-01 ●
303 Troubleshooting by failure code, Part 3 .....	SEN06231-01 ●
304 Troubleshooting by failure code, Part 4 .....	SEN06232-00
400 Troubleshooting of electrical system (E-mode) .....	SEN06233-00
500 Troubleshooting of hydraulic and mechanical system (H-mode) .....	SEN06234-00
600 Troubleshooting of engine (S-mode) .....	SEN06235-00

---

50 Disassembly and assembly .....	SEN06236-01
100 General information on disassembly and assembly .....	SEN06237-00
200 Engine and cooling system .....	SEN06238-01 ●
300 Power train.....	SEN06239-00
400 Undercarriage and frame.....	SEN06240-01 ●
500 Hydraulic system .....	SEN06241-00
600 Work equipment.....	SEN06242-00
700 Cab and its attachments .....	SEN06243-00
800 Electrical system.....	SEN06244-01 ●
80 Appendix .....	SEN06245-00
100 Air conditioner.....	SEN06246-00
90 Diagrams and drawings .....	SEN06247-01
100 Hydraulic diagrams and drawings.....	SEN06248-00
200 Electrical diagrams and drawings .....	SEN06249-01 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$