

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC700LC-11***

SERIAL NUMBERS 80001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-20
FOREWORD, SAFETY, BASIC INFORMATION .....	00-26
HOW TO READ THE SHOP MANUAL .....	00-26
SAFETY NOTICE FOR OPERATION .....	00-28
PRECAUTIONS TO PREVENT FIRE .....	00-36
ACTIONS IF FIRE OCCURS .....	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-40
PRECAUTIONS FOR DEF .....	00-41
STORE AdBlue/DEF .....	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-56
PRACTICAL USE OF KOMTRAX .....	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE .....	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-77
STANDARD TIGHTENING TORQUE TABLE .....	00-80
CONVERSION TABLE .....	00-87
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-17
FUNCTION OF UREA SCR SYSTEM .....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-28
BOOT-UP SYSTEM .....	10-37
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL) .....	10-37
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER) .....	10-38
SYSTEM OPERATING LAMP SYSTEM .....	10-39
BATTERY ISOLATOR .....	10-42
ENGINE SYSTEM .....	10-43
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-43
ENGINE CONTROL SYSTEM .....	10-45
AUTO-DECELERATION SYSTEM .....	10-52

AUTOMATIC LOW IDLE SYSTEM .....	10-54
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-56
OVERHEAT PREVENTION SYSTEM .....	10-59
TURBOCHARGER PROTECTION SYSTEM .....	10-61
AUTOMATIC IDLE STOP SYSTEM .....	10-63
COMPONENT PARTS OF ENGINE SYSTEM .....	10-67
COOLING SYSTEM .....	10-85
LAYOUT DRAWING OF COOLING SYSTEM .....	10-85
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN .....	10-87
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN .....	10-89
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN .....	10-91
COMPONENT PARTS OF COOLING SYSTEM .....	10-92
CONTROL SYSTEM .....	10-107
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL) .....	10-107
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER) .....	10-109
MACHINE MONITOR SYSTEM .....	10-111
KomVision SYSTEM .....	10-114
KOMTRAX SYSTEM .....	10-118
COMPONENT PARTS OF CONTROL SYSTEM .....	10-120
HYDRAULIC SYSTEM .....	10-161
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-161
OLSS .....	10-164
ENGINE AND PUMP COMBINED CONTROL SYSTEM .....	10-176
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-181
WORK EQUIPMENT SYSTEM .....	10-234
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-234
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-240
MACHINE PUSH-UP SYSTEM .....	10-242
BOOM SHOCKLESS CONTROL FUNCTION .....	10-244
PPC LOCK SYSTEM .....	10-245
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-246
ATTACHMENT OIL FLOW ADJUSTER SYSTEM .....	10-248
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM .....	10-252
SWING SYSTEM .....	10-263
LAYOUT DRAWING OF SWING SYSTEM .....	10-263
SWING CONTROL SYSTEM DIAGRAM .....	10-266
COMPONENT PARTS OF SWING SYSTEM .....	10-270
TRAVEL SYSTEM .....	10-284
LAYOUT DRAWING OF TRAVEL SYSTEM .....	10-284
TRAVEL CONTROL SYSTEM DIAGRAM .....	10-288
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-291
UNDERCARRIAGE AND FRAME .....	10-309
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-309
WORK EQUIPMENT .....	10-310
STRUCTURE OF WORK EQUIPMENT .....	10-310
FUNCTION OF WORK EQUIPMENT .....	10-311
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM .....	10-312
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-313
CAB AND ITS ATTACHMENTS .....	10-314
CAB .....	10-314
CAB MOUNT .....	10-315
CAB TIPPING STOPPER .....	10-316
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC700LC-11 .....	20-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$