

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC700LC-11***  
***PC700LC-11E0***

SERIAL NUMBERS 80001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-20
Foreword, Safety, Basic Information .....	00-23
How to Read the Shop Manual .....	00-23
Safety Notice for Operation .....	00-25
Precautions to Prevent Fire .....	00-33
Procedures If Fire Occurs .....	00-35
Precautions for Disposing of Waste Materials .....	00-36
Procedures for Exhaust Gas Regulations .....	00-37
Precautions for DEF .....	00-38
Store DEF .....	00-39
Precautions When You Handle Hydraulic Equipment .....	00-40
Precautions When You Disconnect and Connect Pipings .....	00-43
Precautions When You Handle Electrical Equipment .....	00-50
Precautions When You Handle Fuel System Equipment .....	00-52
Precautions When You Handle Intake System Equipment .....	00-53
Practical Use of KOMTRAX .....	00-54
Disconnect and Connect Push-Pull Type Coupler .....	00-55
Precautions for Disconnection and Connection of Connectors .....	00-59
How to Disconnect and Connect Deutsch Connector .....	00-63
How to Disconnect and Connect Slide Lock Type Connector .....	00-64
How to Disconnect and Connect Connector with Lock to Pull .....	00-66
How to Disconnect and Connect Connector with Lock to Push .....	00-67
How to Disconnect and Connect Connector with Housing to Rotate .....	00-69
How to Read the Codes for Electric Cable .....	00-70
Explanation of Terms for Maintenance Standard .....	00-74
Standard Tightening Torque Table .....	00-77
Conversion Table .....	00-84
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-8
Weight Table .....	01-14
Table Of Fuel, Coolant, And Lubricants: PC700LC-11 .....	01-18
Table Of Fuel, Coolant, And Lubricants: PC700LC-11E0 .....	01-19
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-11
Function of Urea SCR System .....	10-12
Component Parts of Urea SCR System .....	10-22
Boot-up System .....	10-31
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-31
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-32
System Operating Lamp System .....	10-33
Battery Isolator .....	10-36
Engine System .....	10-37
Layout Drawing of Engine System .....	10-37
Engine Control System .....	10-39
Auto-Deceleration System .....	10-46
Automatic Low Idle System .....	10-48
Engine Automatic Warm-up System .....	10-50
Overheat Prevention System .....	10-53

Turbocharger Protection System .....	10-55
Automatic Idle Stop System .....	10-57
Component Parts of Engine System .....	10-61
Cooling System .....	10-79
Layout Drawing of Cooling System .....	10-79
Fan Speed Control System of Hydraulic Fan .....	10-81
Engine Output Control System of Hydraulic Fan .....	10-83
Fan Reverse Rotation System of Hydraulic Fan .....	10-85
Component Parts of Cooling System .....	10-86
Control System .....	10-101
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-101
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-103
Machine Monitor System .....	10-105
KomVision System .....	10-108
KOMTRAX System .....	10-112
Component Parts of Control System .....	10-114
Hydraulic System .....	10-155
Layout Drawing of Hydraulic System .....	10-155
OLSS .....	10-158
Engine and Pump Combined Control System .....	10-170
Component Parts of Hydraulic System .....	10-175
Work Equipment System .....	10-228
Layout Drawing of Work Equipment System .....	10-228
One-Touch Power Maximizing System .....	10-234
Machine Push-up System .....	10-236
Boom Shockless Control Function .....	10-238
PPC Lock System .....	10-239
Work Equipment and Travel Automatic Lock System .....	10-240
Attachment Oil Flow Adjuster System .....	10-242
Component Parts of Work Equipment System .....	10-246
Swing System .....	10-257
Layout Drawing of Swing System .....	10-257
Swing Control System Diagram .....	10-260
Component Parts of Swing System .....	10-264
Travel System .....	10-278
Layout Drawing of Travel System .....	10-278
System Diagram of Travel Control System .....	10-282
Component Parts of Travel System .....	10-285
Undercarriage and Frame .....	10-302
Layout Drawing of Undercarriage .....	10-302
Work Equipment .....	10-303
Structure of Work Equipment .....	10-303
Function of Work Equipment .....	10-304
Work Equipment Clearance Adjustment Shim .....	10-305
Bucket Clearance Adjustment Shim .....	10-306
CAB Related Parts .....	10-307
CAB .....	10-307
CAB Mount .....	10-308
CAB Tipping Stopper .....	10-309
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC700LC-11 .....	20-3
Standard Value Table for Engine: PC700LC-11E0 .....	20-8
Standard Value Table for Machine .....	20-13
Standard Value Table for Machine: PC700LC-11 .....	20-13
Standard Value Table for Machine: PC700LC-11E0 .....	20-30
Machine Posture and Procedures to Measure Performance .....	20-47

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$