

Shop Manual

HYDRAULIC
EXCAVATOR

PC78UU-11

SERIAL NUMBERS 50001 and up

KOMATSU

00 Index and Foreword

Index

| | |
|--|-------|
| 00 Index and Foreword | 00-1 |
| Foreword, Safety, Basic Information | 00-16 |
| How to Read the Shop Manual | 00-16 |
| Safety Notice for Operation | 00-18 |
| Precautions to Prevent Fire | 00-26 |
| Procedures If Fire Occurs | 00-28 |
| Precautions for Disposing of Waste Materials | 00-29 |
| Precautions When You Handle Hydraulic Equipment | 00-30 |
| Precautions When You Disconnect and Connect Pipings | 00-33 |
| Precautions When You Handle Electrical Equipment | 00-40 |
| Precautions When You Handle Fuel System Equipment | 00-42 |
| Precautions When You Handle Intake System Equipment | 00-43 |
| Practical Use of KOMTRAX | 00-44 |
| Disconnect and Connect Push-Pull Type Coupler | 00-45 |
| Precautions for Disconnection and Connection of Connectors | 00-49 |
| How to Disconnect and Connect Deutsch Connector | 00-53 |
| How to Disconnect and Connect Slide Lock Type Connector | 00-54 |
| How to Disconnect and Connect Connector with Lock to Pull | 00-56 |
| How to Disconnect and Connect Connector with Lock to Push | 00-57 |
| How to Disconnect and Connect Connector with Housing to Rotate | 00-59 |
| How to Read the Codes for Electric Cable | 00-60 |
| Explanation of Terms for Maintenance Standard | 00-64 |
| Standard Tightening Torque Table | 00-67 |
| Conversion Table | 00-74 |
| Abbreviation List | 00-79 |
| 01 Specifications | 01-1 |
| Table of Contents | 01-2 |
| Specifications | 01-3 |
| Specification Drawing | 01-3 |
| Working Range Drawings | 01-6 |
| Specifications | 01-8 |
| Weight Table | 01-12 |
| Fuel, Coolant, Lubricant | 01-14 |
| 10 Structure and Function | 10-1 |
| Table of Contents | 10-2 |
| Boot-up System | 10-5 |
| Layout Drawing of Boot-up System | 10-5 |
| System Operating Lamp System | 10-6 |
| Battery Disconnect Switch | 10-7 |
| Engine System | 10-8 |
| Layout Drawing of Engine System | 10-8 |
| Engine Control System | 10-10 |
| Auto-Deceleration System | 10-13 |
| Engine Automatic Warm-up System | 10-15 |
| Overheat Prevention System | 10-17 |
| Turbocharger Protection System | 10-18 |
| Automatic Idle Stop System | 10-19 |
| Component Parts of Engine System | 10-22 |
| Cooling System | 10-36 |
| Layout Drawing of Cooling System | 10-36 |
| Control System | 10-38 |
| Layout Drawing of Control System | 10-38 |
| Layout Drawing of Control System (Machine with KomVision System) | 10-40 |
| Machine Monitor System | 10-42 |
| KOMTRAX System | 10-45 |
| KomVision System | 10-46 |

| | |
|---|--------|
| Component Parts of Control System | 10-49 |
| Hydraulic System | 10-88 |
| Layout Drawing of Hydraulic System..... | 10-88 |
| CLSS | 10-91 |
| Engine and Pump Combined Control System | 10-94 |
| Component Parts of Hydraulic System..... | 10-98 |
| Work Equipment System..... | 10-180 |
| Layout Drawing of Work Equipment System | 10-180 |
| Structure of Valve Control | 10-182 |
| PPC Lock System | 10-183 |
| Work Equipment and Travel Automatic Lock System | 10-184 |
| Interference Prevention Device | 10-187 |
| Automatic Control Device (UU Mode) | 10-198 |
| End Cushion Function..... | 10-202 |
| Resetting Function | 10-203 |
| Attachment Oil Flow Adjuster System | 10-205 |
| Component Parts of Work Equipment System | 10-207 |
| Swing System | 10-245 |
| Layout Drawing of Swing System..... | 10-245 |
| Swing Control System Diagram | 10-247 |
| Component Parts of Swing System..... | 10-249 |
| Travel System | 10-262 |
| Layout Drawing of Travel System..... | 10-262 |
| System Diagram of Travel Control System..... | 10-264 |
| Component Parts of Travel System..... | 10-267 |
| Undercarriage and Frame | 10-281 |
| Layout Drawing of Undercarriage..... | 10-281 |
| Idler Cushion..... | 10-283 |
| Work Equipment | 10-284 |
| Structure of Work Equipment | 10-284 |
| Function of Work Equipment | 10-286 |
| Work Equipment Clearance Adjustment Shim..... | 10-287 |
| Bucket Clearance Adjustment Shim | 10-288 |
| CAB Related Parts | 10-289 |
| ROPS CAB | 10-289 |
| CAB Mount | 10-290 |
| Remove Wiring Harness Out of Cab | 10-292 |
| 20 Standard Value Table | 20-1 |
| Table of Contents | 20-2 |
| Standard Value Table for Engine | 20-3 |
| Standard Value Table for Engine: PC78UU-11 | 20-3 |
| Standard Value Table for Machine..... | 20-5 |
| Standard Value Table for Machine: PC78UU-11 | 20-5 |
| Machine Posture and Procedures to Measure Performance | 20-18 |
| 30 Testing and Adjusting | 30-1 |
| Table of Contents | 30-2 |
| Precautions Before Work | 30-5 |
| Related Information on Testing and Adjusting | 30-6 |
| Tools for Testing and Adjusting..... | 30-6 |
| Sketch of Tools for Testing and Adjusting | 30-11 |
| Engine and Cooling System | 30-13 |
| Examine Engine Speed..... | 30-13 |
| Examine Exhaust Gas Color | 30-17 |
| Examine and Adjust Valve Clearance..... | 30-20 |
| Examine Compression Pressure | 30-22 |
| Examine Blowby Pressure | 30-25 |
| Examine Engine Oil Pressure | 30-27 |
| Visual Check Inside of EGR Valve | 30-29 |

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$