

Shop Manual

HYDRAULIC
EXCAVATOR

PC800 -8

PC800LC-8

PC800SE-8

PC850 -8

PC850SE-8

SERIAL NUMBERS

PC800- 50001

PC800LC- 50001

PC800SE- 50001

PC850- 10001

PC850SE- 10001

and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC800-8

PC850-8

PC800SE-8

PC850SE-8

PC800LC-8

Machine model

Serial number

PC800-8

50001 and up

PC800SE-8

50001 and up

PC800LC-8

50001 and up

PC850-8

10001 and up

PC850SE-8

10001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00373-22
00 Index and foreword	SEN00374-22
Index	SEN00375-22
Foreword and general information	SEN00376-05
01 Specification	SEN00377-03
Specification and technical data	SEN00378-03
10 Structure, function and maintenance standard	SEN00379-10
Engine and cooling system	SEN00380-01
Power train	SEN00381-03
Undercarriage and frame	SEN00382-02
Hydraulic system, Part 1	SEN00383-03
Hydraulic system, Part 2	SEN00384-04
Work equipment	SEN00385-02
Cab and its attachments	SEN00396-01
Electrical system	SEN00386-05
20 Standard value table	SEN00387-02
Standard service value table	SEN00784-02
30 Testing and adjusting	SEN00388-06
Testing and adjusting, Part 1	SEN00786-04
Testing and adjusting, Part 2	SEN00788-04
Testing and adjusting, Part 3	SEN00912-03
Testing and adjusting, Part 4	SEN00913-03
Testing and adjusting, Part 5	SEN00914-03
40 Troubleshooting	SEN00389-05
Failure code table and fuse locations	SEN02797-02
General information on troubleshooting	SEN00789-04
Troubleshooting by failure code (Display of code), Part 1	SEN00790-04
Troubleshooting by failure code (Display of code), Part 2	SEN00791-03
Troubleshooting by failure code (Display of code), Part 3	SEN00792-03
Troubleshooting of electrical system (E-mode)	SEN00793-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00794-02
Troubleshooting of engine (S-mode)	SEN00795-03
50 Disassembly and assembly	SEN00390-13
General information on disassembly and assembly	SEN01052-06
Engine and cooling system (SAA6D140E-5)	SEN01053-02
Engine (SAA6D140E-5)	SEN01054-02
Power train	SEN01055-07

Undercarriage and frame	SEN01056-07
Hydraulic system	SEN01057-05
Work equipment	SEN01058-02
Cab and its attachments	SEN01059-03
Electrical system	SEN01060-02
90 Diagrams and drawings	SEN00391-04
Hydraulic diagrams and drawings	SEN00392-02
Electrical diagrams and drawings	SEN00393-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$