

Shop Manual

HYDRAULIC
EXCAVATOR

PC88MR-11

SERIAL NUMBERS 10001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-15
How to Read the Shop Manual	00-15
Safety Notice for Operation	00-17
Precautions to Prevent Fire	00-25
Procedures If Fire Occurs	00-27
Precautions When You Discard Waste Materials	00-28
Precautions When You Handle Hydraulic Equipment	00-29
Precautions When You Disconnect and Connect Pipings	00-32
Precautions When You Handle Electrical Equipment	00-39
Precautions When You Handle Fuel System Equipment	00-41
Precautions When You Handle Intake System Equipment	00-42
Practical Use of KOMTRAX	00-43
Disconnect and Connect Push-Pull Type Coupler	00-44
Precautions for Disconnection and Connection of Connectors	00-48
How to Disconnect and Connect Deutsch Connector	00-52
How to Disconnect and Connect Slide Lock Type Connector	00-53
How to Disconnect and Connect Connector with Lock to Pull	00-55
How to Disconnect and Connect Connector with Lock to Push	00-56
How to Disconnect and Connect Connector with Housing to Rotate	00-58
How to Read the Codes for Electric Cable	00-59
Explanation of Terms for Maintenance Standard	00-63
Standard Tightening Torque Table	00-66
Conversion Table	00-73
Abbreviation List	00-78
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-4
Specifications	01-5
Weight Table	01-9
Fuel, Coolant, Lubricants (KAL Specification)	01-11
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-5
Layout Drawing of Boot-up System	10-5
System Operating Lamp System	10-6
Battery Disconnect Switch	10-8
Engine System	10-9
Layout Drawing of Engine System	10-9
Engine Control System	10-11
Auto-Deceleration System	10-14
Engine Automatic Warm-up System	10-16
Overheat Prevention System	10-18
Turbocharger Protection System	10-19
Automatic Idle Stop System	10-20
Component Parts of Engine System	10-23
Cooling System	10-38
Layout Drawing of Cooling System	10-38
Control System	10-40
Layout Drawing of Control System	10-40
Machine Monitor System	10-42
KOMTRAX System	10-44
Component Parts of Control System	10-45
Hydraulic System	10-76

Layout Drawing of Hydraulic System.....	10-76
CLSS	10-79
Engine and Pump Combined Control System	10-82
Component Parts of Hydraulic System.....	10-86
Work Equipment System.....	10-168
Layout Drawing of Work Equipment System	10-168
PPC Lock System	10-170
Work Equipment and Travel Automatic Lock System	10-171
Overload Caution System	10-173
Attachment Oil Flow Adjuster System	10-175
Component Parts of Work Equipment System	10-177
Swing System	10-209
Layout Drawing of Swing System.....	10-209
Swing Control System Diagram	10-211
Component Parts of Swing System.....	10-213
Travel System	10-226
Layout Drawing of Travel System.....	10-226
System Diagram of Travel Control System.....	10-228
Component Parts of Travel System.....	10-231
Undercarriage and Frame	10-245
Layout Drawing of Undercarriage.....	10-245
Idler Cushion.....	10-247
Work Equipment	10-248
Structure of Work Equipment	10-248
Function of Work Equipment.....	10-249
Work Equipment Clearance Adjustment Shim.....	10-250
Bucket Clearance Adjustment Shim	10-251
CAB Related Parts.....	10-252
ROPS CAB	10-252
CAB Mount	10-253
Remove Wiring Harness Out of Cab	10-255
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC88MR-11	20-3
Standard Value Table for Machine.....	20-5
Standard Value Table for Machine: PC88MR-11.....	20-5
Machine Posture and Procedures to Measure Performance	20-17
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Related Information on Testing and Adjusting	30-6
Tools for Testing and Adjusting.....	30-6
Sketch of Tools for Testing and Adjusting	30-11
Engine and Cooling System	30-13
Examine Engine Speed.....	30-13
Examine Exhaust Gas Color	30-17
Examine and Adjust Valve Clearance.....	30-20
Examine Compression Pressure	30-22
Examine Blowby Pressure	30-25
Examine Engine Oil Pressure	30-27
Visual Check Inside of EGR Valve	30-29
Clean Inside of EGR Valve.....	30-31
Examine Fuel Pressure.....	30-34
Examine Fuel Return Rate and Leakage.....	30-36
Bleed Air from Fuel System.....	30-41
Examine Fuel Circuit for Leakage	30-43
Handle Cylinder Cut-out Mode Operation.....	30-45

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$