

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC88MR-11***

SERIAL NUMBERS C40001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
FOREWORD, SAFETY, BASIC INFORMATION .....	00-15
HOW TO READ THE SHOP MANUAL.....	00-15
SAFETY NOTICE FOR OPERATION.....	00-17
PRECAUTIONS TO PREVENT FIRE.....	00-25
ACTIONS IF FIRE OCCURS .....	00-27
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-28
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-29
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-32
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-39
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-41
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-42
PRACTICAL USE OF KOMTRAX.....	00-43
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-48
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-52
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-53
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-56
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-58
HOW TO READ ELECTRICAL WIRE CODE .....	00-59
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-63
STANDARD TIGHTENING TORQUE TABLE.....	00-66
CONVERSION TABLE .....	00-73
ABBREVIATION LIST .....	00-78
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
SPECIFICATIONS .....	01-3
SPECIFICATION DRAWING.....	01-3
WORKING RANGE DRAWINGS .....	01-4
SPECIFICATIONS .....	01-5
WEIGHT TABLE .....	01-9
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA) .....	01-11
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
BOOT-UP SYSTEM.....	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-5
SYSTEM OPERATING LAMP SYSTEM .....	10-6
BATTERY DISCONNECT SWITCH .....	10-8
ENGINE SYSTEM .....	10-9
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-9
ENGINE CONTROL SYSTEM .....	10-11
AUTO-DECELERATION SYSTEM.....	10-14
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-16
OVERHEAT PREVENTION SYSTEM.....	10-18
TURBOCHARGER PROTECTION SYSTEM.....	10-19
AUTOMATIC IDLE STOP SYSTEM .....	10-20
COMPONENT PARTS OF ENGINE SYSTEM .....	10-23
COOLING SYSTEM.....	10-38
LAYOUT DRAWING OF COOLING SYSTEM .....	10-38
CONTROL SYSTEM.....	10-40
LAYOUT DRAWING OF CONTROL SYSTEM.....	10-40
MACHINE MONITOR SYSTEM .....	10-42
KOMTRAX SYSTEM.....	10-44
COMPONENT PARTS OF CONTROL SYSTEM.....	10-45

HYDRAULIC SYSTEM.....	10-76
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-76
CLSS .....	10-79
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-82
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-86
WORK EQUIPMENT SYSTEM .....	10-167
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-167
PPC LOCK SYSTEM .....	10-169
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-170
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-172
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-174
SWING SYSTEM .....	10-206
LAYOUT DRAWING OF SWING SYSTEM .....	10-206
SWING CONTROL SYSTEM DIAGRAM .....	10-208
COMPONENT PARTS OF SWING SYSTEM.....	10-210
TRAVEL SYSTEM.....	10-223
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-223
SYSTEM DIAGRAM OF TRAVEL CONTROL SYSTEM.....	10-225
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-228
UNDERCARRIAGE AND FRAME.....	10-242
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-242
IDLER CUSHION.....	10-244
WORK EQUIPMENT.....	10-245
STRUCTURE OF WORK EQUIPMENT .....	10-245
FUNCTION OF WORK EQUIPMENT .....	10-246
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-247
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-248
CAB AND ITS ATTACHMENTS .....	10-249
ROPS CAB .....	10-249
CAB MOUNT .....	10-250
TAKE WIRING HARNESS OUT OF CAB.....	10-252
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: PC88MR-11 .....	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-5
STANDARD VALUE TABLE FOR MACHINE: PC88MR-11 .....	20-5
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE .....	20-17
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-10
ENGINE AND COOLING SYSTEM.....	30-12
TEST ENGINE SPEED .....	30-12
TEST EXHAUST GAS COLOR.....	30-16
TEST AND ADJUST VALVE CLEARANCE .....	30-19
TEST COMPRESSION PRESSURE.....	30-21
TEST BLOWBY PRESSURE .....	30-24
TEST ENGINE OIL PRESSURE .....	30-26
VISUAL CHECK INSIDE OF EGR VALVE.....	30-28
CLEAN INSIDE OF EGR VALVE.....	30-30
TEST FUEL PRESSURE .....	30-33
TEST FUEL RETURN RATE AND LEAKAGE.....	30-35
BLEED AIR FROM FUEL SYSTEM .....	30-40
TEST FUEL SYSTEM FOR LEAKAGE .....	30-42
CYLINDER CUT-OUT MODE OPERATION.....	30-44
NO-INJECTION CRANKING OPERATION .....	30-45

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$