

Shop Manual

HYDRAULIC
EXCAVATOR

PC88MR-11EO

SERIAL NUMBERS 10001 and up

KOMATSU

00 Index and Foreword

Index

| | |
|--|-------|
| 00 Index and Foreword | 00-1 |
| Foreword, Safety, Basic Information | 00-16 |
| How to Read the Shop Manual | 00-16 |
| Safety Notice for Operation | 00-18 |
| Precautions to Prevent Fire | 00-26 |
| Procedures If Fire Occurs | 00-28 |
| Precautions When You Discard Waste Materials | 00-29 |
| Precautions When You Handle Hydraulic Equipment | 00-30 |
| Precautions When You Disconnect and Connect Pipings | 00-33 |
| Precautions When You Handle Electrical Equipment | 00-40 |
| Precautions When You Handle Fuel System Equipment | 00-42 |
| Precautions When You Handle Intake System Equipment | 00-43 |
| Practical Use of KOMTRAX | 00-44 |
| Disconnect and Connect Push-Pull Type Coupler | 00-45 |
| Precautions for Disconnection and Connection of Connectors | 00-49 |
| How to Disconnect and Connect Deutsch Connector | 00-53 |
| How to Disconnect and Connect Slide Lock Type Connector | 00-54 |
| How to Disconnect and Connect Connector with Lock to Pull | 00-56 |
| How to Disconnect and Connect Connector with Lock to Push | 00-57 |
| How to Disconnect and Connect Connector with Housing to Rotate | 00-59 |
| How to Read the Codes for Electric Cable | 00-60 |
| Explanation of Terms for Maintenance Standard | 00-64 |
| Standard Tightening Torque Table | 00-67 |
| Conversion Table | 00-74 |
| Abbreviation List | 00-79 |
| 01 Specifications | 01-1 |
| Table of Contents | 01-2 |
| Specifications | 01-3 |
| Specification Drawing | 01-3 |
| Working Range Drawings | 01-4 |
| Specifications | 01-5 |
| Weight Table | 01-9 |
| Fuel, Coolant, Lubricants (For European Union) | 01-11 |
| 10 Structure and Function | 10-1 |
| Table of Contents | 10-2 |
| Boot-up System | 10-5 |
| Layout Drawing of Boot-up System | 10-5 |
| System Operating Lamp System | 10-6 |
| Battery Disconnect Switch | 10-8 |
| Engine System | 10-9 |
| Layout Drawing of Engine System | 10-9 |
| Engine Control System | 10-11 |
| Auto-Deceleration System | 10-14 |
| Engine Automatic Warm-up System | 10-16 |
| Overheat Prevention System | 10-18 |
| Turbocharger Protection System | 10-19 |
| Automatic Idle Stop System | 10-20 |
| Component Parts of Engine System | 10-23 |
| Cooling System | 10-40 |
| Layout Drawing of Cooling System | 10-40 |
| Control System | 10-42 |
| Layout Drawing of Control System | 10-42 |
| Machine Monitor System | 10-44 |
| KOMTRAX System | 10-46 |
| Component Parts of Control System | 10-47 |
| Hydraulic System | 10-79 |

| | |
|---|--------|
| Layout Drawing of Hydraulic System..... | 10-79 |
| CLSS | 10-82 |
| Engine and Pump Combined Control System | 10-85 |
| Component Parts of Hydraulic System..... | 10-89 |
| Work Equipment System..... | 10-171 |
| Layout Drawing of Work Equipment System | 10-171 |
| PPC Lock System | 10-173 |
| Work Equipment and Travel Automatic Lock System | 10-174 |
| Overload Caution System | 10-176 |
| Attachment Oil Flow Adjuster System | 10-178 |
| Component Parts of Work Equipment System | 10-180 |
| Swing System | 10-210 |
| Layout Drawing of Swing System..... | 10-210 |
| Swing Control System Diagram | 10-212 |
| Component Parts of Swing System..... | 10-214 |
| Travel System | 10-227 |
| Layout Drawing of Travel System..... | 10-227 |
| System Diagram of Travel Control System..... | 10-229 |
| Component Parts of Travel System..... | 10-232 |
| Undercarriage and Frame | 10-246 |
| Layout Drawing of Undercarriage..... | 10-246 |
| Idler Cushion..... | 10-248 |
| Work Equipment | 10-249 |
| Structure of Work Equipment | 10-249 |
| Function of Work Equipment | 10-250 |
| Work Equipment Clearance Adjustment Shim..... | 10-251 |
| Bucket Clearance Adjustment Shim | 10-252 |
| CAB Related Parts | 10-253 |
| ROPS CAB | 10-253 |
| CAB Mount | 10-254 |
| Remove Wiring Harness Out of Cab | 10-256 |
| 20 Standard Value Table | 20-1 |
| Table of Contents | 20-2 |
| Standard Value Table for Engine | 20-3 |
| Standard Value Table for Engine: PC88MR-11E0..... | 20-3 |
| Standard Value Table for Machine..... | 20-5 |
| Standard Value Table for Machine: PC88MR-11E0 | 20-5 |
| Machine Posture and Procedures to Measure Performance | 20-17 |
| 30 Testing and Adjusting | 30-1 |
| Table of Contents | 30-2 |
| Precautions Before Work | 30-5 |
| Related Information on Testing and Adjusting | 30-6 |
| Differences In Machine Monitor Symbols | 30-6 |
| Tools for Testing and Adjusting..... | 30-7 |
| Sketch of Tools for Testing and Adjusting | 30-12 |
| Engine and Cooling System | 30-14 |
| Examine Engine Speed..... | 30-14 |
| Examine Exhaust Gas Color | 30-18 |
| Examine and Adjust Valve Clearance..... | 30-21 |
| Examine Compression Pressure | 30-23 |
| Examine Blowby Pressure | 30-26 |
| Examine Engine Oil Pressure | 30-28 |
| Visual Check Inside of EGR Valve | 30-30 |
| Clean Inside of EGR Valve | 30-32 |
| Examine Fuel Pressure | 30-35 |
| Examine Fuel Return Rate and Leakage..... | 30-37 |
| Bleed Air from Fuel System..... | 30-42 |
| Examine Fuel Circuit for Leakage | 30-44 |

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$