

Shop Manual

HYDRAULIC
EXCAVATOR

PC88MR-8

SERIAL NUMBERS 5001 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC88MR-8

Machine model Serial number
PC88MR-8 5001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04329-15
00 Index and foreword	SEN04330-15
100 Index	SEN04338-15
200 Foreword and general information	SEN04339-04
01 Specification	SEN04331-01
100 Specification and technical data.....	SEN04340-01
10 Structure, function and maintenance standard.....	SEN04332-08
100 Engine and cooling system	SEN04464-01
200 Power train.....	SEN04465-01
300 Undercarriage and frame	SEN04466-01
410 Hydraulic system, Part 1	SEN04467-03
420 Hydraulic system, Part 2	SEN04468-01
430 Hydraulic system, Part 3	SEN04469-05
500 Work equipment.....	SEN04470-00
600 Cab and its attachments	SEN04471-02
700 Electrical system.....	SEN04472-05
20 Standard value table.....	SEN04333-03
100 Standard service value table.....	SEN04443-03
30 Testing and adjusting	SEN04334-08
110 Testing and adjusting, Part 1.....	SEN04444-08
120 Testing and adjusting, Part 2.....	SEN04445-04
130 Testing and adjusting, Part 3.....	SEN04446-01
40 Troubleshooting.....	SEN04335-07
100 Failure code table and fuse locations	SEN04447-04
200 General information on troubleshooting.....	SEN04448-02
310 Troubleshooting by failure code, Part 1	SEN04449-03
320 Troubleshooting by failure code, Part 2	SEN04450-04
330 Troubleshooting by failure code, Part 3	SEN04451-02
340 Troubleshooting by failure code, Part 4	SEN04452-01
400 Troubleshooting of electrical system (E-mode).....	SEN04453-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04454-01
600 Troubleshooting of engine (S-mode).....	SEN04455-01
50 Disassembly and assembly.....	SEN04336-08
100 General information on disassembly and assembly	SEN04456-03
200 Engine and cooling system	SEN04457-04
300 Power train.....	SEN04458-01
400 Undercarriage and frame	SEN04459-02
500 Hydraulic system.....	SEN04460-02

600	Work equipment	SEN04461-00
700	Cab and its attachments.....	SEN04462-00
800	Electrical system	SEN04463-03
90	Diagrams and drawings.....	SEN04337-02
100	Hydraulic diagrams and drawings	SEN04341-01
200	Electrical diagrams and drawings	SEN04342-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$