



# PW160-10

**MACHINE MODEL**

**PW160-10**

**SERIAL NUMBER**

**H62051 AND UP**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
- Materials and specifications are subject to change without notice.
- PW160-10 mount the SAA4D107E-2 engine.
- For details of the engine, see the 107 Series Engine Shop Manual.



# CONTENTS

No. of page

00	FOREWORD .....	00-1
01	GENERAL .....	01-1
10	STRUCTURE AND FUNCTION .....	10-1
20	STANDARD VALUE TABLE .....	20-1
30	TESTING AND ADJUSTING.....	30-1
40	TROUBLESHOOTING	
	Troubleshooting .....	40-1
	Troubleshooting when failure code is indicated .....	40-101
50	DISASSEMBLY AND ASSEMBLY.....	50-1
80	APPENDIX .....	80-1
90	OTHER .....	90-1



**Blank for technical reason**

---

# 01 GENERAL

---

Specification dimension drawings .....	1-2
Dimensions .....	1-2
Working ranges .....	1-4
Working range: 1-piece boom .....	1-4
Working range: 2-piece boom .....	1-5
Weight table .....	1-9
1-piece boom .....	1-10
2-piece boom .....	1-11
Fuel, coolant and lubricants .....	1-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$