

# Shop Manual

SKID-STEER LOADER

**SK815-8E0**

SERIAL NUMBERS F30002 and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-7
How to Read the Shop Manual .....	00-7
Safety Notice for Operation .....	00-9
Precautions to Prevent Fire .....	00-16
Procedures If Fire Occurs .....	00-18
Precautions When You Dispose of Waste Materials .....	00-19
Precautions When You Handle Hydraulic Equipment .....	00-20
Precautions When You Disconnect and Connect Pipings .....	00-23
Precautions When You Handle Electrical Equipment .....	00-30
Precautions When You Handle Fuel System Equipment .....	00-32
Precautions When You Handle Intake System Equipment .....	00-33
Practical Use of KOMTRAX .....	00-34
Disconnect and Connect Push-Pull Type Coupler .....	00-35
Precautions for Disconnection and Connection of Connectors .....	00-39
How to Disconnect and Connect Deutsch Connector .....	00-43
How to Disconnect and Connect Slide Lock Type Connector .....	00-44
How to Disconnect and Connect Connector with Lock to Pull .....	00-46
How to Disconnect and Connect Connector with Lock to Push .....	00-47
How to Disconnect and Connect Connector with Housing to Rotate .....	00-49
Standard Tightening Torque Table .....	00-50
Conversion Table .....	00-57
Abbreviation List .....	00-62
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specification .....	01-8
Weight Table .....	01-10
How to Use Fuel, Coolant and Lubricants by Ambient Temperature .....	01-11
10 Structure and Function .....	10-1
Table of Contents .....	10-2
NOx Control System .....	10-4
Function of NOx Control System .....	10-4
Boot-up System .....	10-6
Layout Drawing of Boot-up System .....	10-6
System Operating Lamp System .....	10-7
Quick Release Battery Terminal (-) .....	10-9
Engine System .....	10-10
Layout Drawing of Engine System .....	10-10
Engine Control System .....	10-11
Component Parts of Engine System .....	10-14
Cooling System .....	10-15
Layout Drawing of Cooling System .....	10-15
Control System .....	10-16
Layout Drawing of Control System .....	10-16
Machine Monitor System .....	10-17
KOMTRAX System .....	10-18
Component Parts of Control System .....	10-19
Hydraulic System .....	10-34
Layout Drawing of Hydraulic System .....	10-34
CLSS .....	10-35
Component Parts of Hydraulic System .....	10-37
Work Equipment System .....	10-68
Layout Drawing of Work Equipment System .....	10-68
PPC Lock System .....	10-69

Component Parts of Work Equipment System .....	10-70
Travel System .....	10-80
Layout Drawing of Travel System.....	10-80
System Diagram of Travel Control System.....	10-81
Component Parts of Travel System.....	10-82
Work Equipment .....	10-95
Structure of Work Equipment .....	10-95
Function of Work Equipment .....	10-96
Work Equipment Clearance Adjustment Shim.....	10-97
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Machine.....	20-5
Machine Posture and Procedures to Measure Performance .....	20-14
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Engine and Cooling System .....	30-4
Examine Engine Speed.....	30-4
Examine Exhaust Gas Color .....	30-6
Examine and Adjust Valve Clearance.....	30-8
Examine Compression Pressure .....	30-10
Examine Engine Oil Pressure .....	30-12
Bleed Air from Fuel System.....	30-13
Examine Fuel Circuit for Leakage .....	30-14
Handle Cylinder Cut-out Mode Operation.....	30-15
Examine and Adjust Alternator Belt Tension.....	30-16
Frame .....	30-18
Examine and Adjust Gear Chain Tension .....	30-18
Hydraulic System .....	30-19
Release Remained Pressure in Hydraulic Circuit.....	30-19
Examine Oil Pressure of Work Equipment .....	30-20
Adjust Oil Pressure of Work Equipment .....	30-23
Examine Oil Pressure of Control Circuit .....	30-25
Examine and Adjust Oil Pressure of Pump Circuit.....	30-27
Examine Outlet Pressure of Solenoid Valve .....	30-31
Examine PPC Valve Outlet Pressure.....	30-33
Examine Parking Brake Release Pressure.....	30-37
Examine and Adjust Travel Deviation .....	30-38
Adjust Play of Work Equipment and Travel PPC Valves .....	30-41
Examine Parts Which Cause Hydraulic Drift of Work Equipment.....	30-42
Bleed Air from Hydraulic System.....	30-43
Pressurize Hydraulic Tank.....	30-45
Electrical System .....	30-46
How to Set and Operate Machine Monitor.....	30-46
How to Start Up KOMTRAX Terminal .....	30-81
Handle Voltage Circuit of Engine Controller .....	30-86
40 Troubleshooting .....	40-1
Table of Contents .....	40-2
Abbreviation List .....	40-5
Related Information to Troubleshooting .....	40-11
General Troubleshooting Points .....	40-11
Sequence of Events in Troubleshooting .....	40-12
Troubleshooting Points for Aftertreatment System .....	40-14
Checks Before Troubleshooting .....	40-22
Inspection Procedure Before Troubleshooting.....	40-24
Test in Accordance with Testing Procedure .....	40-26
Procedure for Troubleshooting .....	40-52
Information Shown in Troubleshooting Table .....	40-55

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$