

Shop Manual

SKID-STEER LOADER

SK820-8E0 SERIAL NUMBERS F50002 and up

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-7
How to Read the Shop Manual	00-7
Safety Notice for Operation	00-9
Precautions to Prevent Fire	00-16
Procedures If Fire Occurs	00-18
Precautions When You Dispose of Waste Materials	00-19
Precautions When You Handle Hydraulic Equipment	00-20
Precautions When You Disconnect and Connect Pipings	00-23
Precautions When You Handle Electrical Equipment	00-30
Precautions When You Handle Fuel System Equipment	00-32
Precautions When You Handle Intake System Equipment	00-33
Practical Use of KOMTRAX	00-34
Disconnect and Connect Push-Pull Type Coupler	00-35
Precautions for Disconnection and Connection of Connectors	00-39
How to Disconnect and Connect Deutsch Connector	00-43
How to Disconnect and Connect Slide Lock Type Connector	00-44
How to Disconnect and Connect Connector with Lock to Pull	00-46
How to Disconnect and Connect Connector with Lock to Push	00-47
How to Disconnect and Connect Connector with Housing to Rotate	00-49
Standard Tightening Torque Table	00-50
Conversion Table	00-57
Abbreviation List	00-62
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specification	01-8
Weight Table	01-10
How to Use Fuel, Coolant and Lubricants by Ambient Temperature	01-11
10 Structure and Function	10-1
Table of Contents	10-2
NOx Control System	10-4
Function of NOx Control System	10-4
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
System Operating Lamp System	10-7
Quick Release Battery Terminal (-)	10-9
Engine System	10-10
Layout Drawing of Engine System	10-10
Engine Control System	10-11
Component Parts of Engine System	10-14
Cooling System	10-15
Layout Drawing of Cooling System	10-15
Control System	10-16
Layout Drawing of Control System	10-16
Machine Monitor System	10-17
KOMTRAX System	10-18
Component Parts of Control System	10-19
Hydraulic System	10-34
Layout Drawing of Hydraulic System	10-34
CLSS	10-35
Component Parts of Hydraulic System	10-37
Work Equipment System	10-66
Layout Drawing of Work Equipment System	10-66
PPC Lock System	10-67

Component Parts of Work Equipment System	10-68
Travel System	10-78
Layout Drawing of Travel System.....	10-78
System Diagram of Travel Control System.....	10-79
Component Parts of Travel System.....	10-80
Work Equipment	10-93
Structure of Work Equipment	10-93
Function of Work Equipment.....	10-94
Work Equipment Clearance Adjustment Shim	10-95
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Machine.....	20-5
Machine Posture and Procedures to Measure Performance	20-14
30 Testing and Adjusting	30-1
Table of Contents	30-2
Engine and Cooling System	30-4
Examine Engine Speed.....	30-4
Examine Exhaust Gas Color	30-6
Examine and Adjust Valve Clearance.....	30-8
Examine Compression Pressure	30-10
Examine Engine Oil Pressure	30-12
Bleed Air from Fuel System.....	30-13
Examine Fuel Circuit for Leakage	30-14
Handle Cylinder Cut-out Mode Operation.....	30-15
Examine and Adjust Alternator Belt Tension.....	30-16
Frame	30-18
Examine and Adjust Gear Chain Tension	30-18
Hydraulic System	30-19
Release Remained Pressure in Hydraulic Circuit	30-19
Examine Oil Pressure of Work Equipment	30-20
Adjust Oil Pressure of Work Equipment	30-23
Examine Oil Pressure of Control Circuit	30-25
Examine and Adjust Oil Pressure of Pump Circuit.....	30-27
Examine Outlet Pressure of Solenoid Valve	30-31
Examine PPC Valve Outlet Pressure.....	30-33
Examine Parking Brake Release Pressure.....	30-37
Examine and Adjust Travel Deviation.....	30-38
Adjust Play of Work Equipment and Travel PPC Valves.....	30-41
Examine Parts Which Cause Hydraulic Drift of Work Equipment.....	30-42
Bleed Air from Hydraulic System.....	30-43
Pressurize Hydraulic Tank.....	30-45
Electrical System	30-46
How to Set and Operate Machine Monitor.....	30-46
How to Start Up KOMTRAX Terminal.....	30-81
Handle Voltage Circuit of Engine Controller	30-86
40 Troubleshooting	40-1
Table of Contents	40-2
Abbreviation List	40-5
Related Information to Troubleshooting.....	40-11
General Troubleshooting Points	40-11
Sequence of Events in Troubleshooting	40-12
Troubleshooting Points for Aftertreatment System	40-14
Checks Before Troubleshooting	40-22
Inspection Procedure Before Troubleshooting.....	40-24
Test in Accordance with Testing Procedure	40-26
Procedure for Troubleshooting	40-53
Information Shown in Troubleshooting Table.....	40-56

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$