

Shop Manual

WHEEL LOADER

WA200-8

SERIAL NUMBERS 85001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-20
Foreword, Safety, Basic Information	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire	00-36
Procedures If Fire Occurs	00-38
Precautions for Disposing of Waste Materials	00-39
Procedures for Exhaust Gas Regulations	00-40
Precautions for DEF	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment	00-43
Precautions When You Disconnect and Connect Pipings	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
How to Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
How to Disconnect and Connect Connector with Lock to Pull	00-69
How to Disconnect and Connect Connector with Lock to Push	00-70
How to Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table	00-80
Conversion Table	00-87
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-11
Weight Table	01-17
Fuel, Coolant, Lubricants (For North America)	01-19
Fuel, Coolant, Lubricants (For European Union)	01-21
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-6
Urea SCR System	10-12
Layout Drawing of Urea SCR System	10-12
Urea SCR System Diagram	10-14
Function of Urea SCR System	10-15
Component Parts of Urea SCR System	10-32
Boot-up System	10-41
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-41
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-43
System Operating Lamp System	10-45
Battery Disconnect Switch	10-48
Preheating System	10-49
Engine System	10-51
Layout Drawing of Engine System	10-51
Engine Control System	10-53
Automatic Idle Stop System	10-65
Component Parts of Engine System	10-66

Cooling System.....	10-83
Layout Drawing of Cooling System	10-83
Cooling Fan Control System	10-85
Component Parts of Cooling System	10-90
Control System	10-101
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-101
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-103
Machine Monitor System.....	10-105
Rearview Monitor System	10-108
KOMTRAX System	10-109
Component Parts of Control System	10-111
Hydraulic System	10-159
Layout Drawing of Hydraulic System.....	10-159
Component Parts of Hydraulic System.....	10-160
Power Train System.....	10-186
Layout Drawing of Power Train System	10-186
Operation of Power Train System	10-188
Directional Selector Switch Control Function.....	10-189
HST Control System	10-191
HST Charge System	10-193
HST Pump Control System	10-194
HST Controller Gear Shift Control Function	10-196
Transfer Clutch Control Function.....	10-199
HST System Protection Function	10-200
Komatsu Traction Control System (KTCS)	10-202
Component Parts of Power Train System.....	10-206
Work Equipment System.....	10-251
Layout Drawing of Work Equipment System	10-251
Work Equipment Control System	10-253
Work Equipment Lock System	10-254
Bucket Positioner System	10-256
Boom Kick-out System.....	10-259
ECSS.....	10-262
Component Parts of Work Equipment System	10-264
Steering System.....	10-276
Layout Drawing of Steering System	10-276
Steering Column	10-277
Component Parts of Steering System	10-278
Brake System.....	10-294
Layout Drawing of Brake System	10-294
Parking Brake Control System	10-296
Component Parts of Brake System	10-299
Undercarriage and Frame	10-319
Frame, Axle Mount and Center Hinge Pin	10-319
Tires.....	10-322
Work Equipment	10-324
Structure of Work Equipment	10-324
Structure of Bucket.....	10-325
CAB Related Parts.....	10-326
ROPS CAB	10-326
CAB Mount	10-328
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: WA200-8	20-9
Standard Value Table for Machine.....	20-14
Standard Value Table for Machine: WA200-8	20-14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$