

# Shop Manual

WHEEL LOADER

**WA270-8E0**

SERIAL NUMBERS 84424 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-22
Foreword, Safety, Basic Information .....	00-28
How to Read the Shop Manual .....	00-28
Safety Notice for Operation .....	00-30
Precautions to Prevent Fire .....	00-38
Procedures If Fire Occurs .....	00-40
Precautions for Disposing of Waste Materials .....	00-41
Procedures for Exhaust Gas Regulations .....	00-42
Precautions for DEF .....	00-43
Store DEF .....	00-44
Precautions When You Handle Hydraulic Equipment .....	00-45
Precautions When You Disconnect and Connect Pipings .....	00-48
Precautions When You Handle Electrical Equipment .....	00-55
Precautions When You Handle Fuel System Equipment .....	00-57
Precautions When You Handle Intake System Equipment .....	00-58
Practical Use of KOMTRAX .....	00-59
Disconnect and Connect Push-Pull Type Coupler .....	00-60
Precautions for Disconnection and Connection of Connectors .....	00-64
How to Disconnect and Connect Deutsch Connector .....	00-68
How to Disconnect and Connect Slide Lock Type Connector .....	00-69
How to Disconnect and Connect Connector with Lock to Pull .....	00-71
How to Disconnect and Connect Connector with Lock to Push .....	00-72
How to Disconnect and Connect Connector with Housing to Rotate .....	00-74
How to Read the Codes for Electric Cable .....	00-75
Explanation of Terms for Maintenance Standard .....	00-79
Standard Tightening Torque Table .....	00-82
Conversion Table .....	00-89
01 Specifications .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Specifications .....	01-11
Weight Table .....	01-16
Fuel, Coolant, Lubricants (for European Union and Turkey) .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-6
Urea SCR System .....	10-12
Layout Drawing of Urea SCR System .....	10-12
Urea SCR System Diagram .....	10-14
Function of Urea SCR System .....	10-15
Component Parts of Urea SCR System .....	10-26
Boot-up System .....	10-35
Layout Drawing of Boot-up System .....	10-35
System Operating Lamp System .....	10-37
Battery Disconnect Switch .....	10-38
Preheating System .....	10-39
Engine System .....	10-41
Layout Drawing of Engine System .....	10-41
Engine Control System .....	10-44
Automatic Idle Stop System .....	10-51
Component Parts of Engine System .....	10-52
Cooling System .....	10-72
Layout Drawing of Cooling System .....	10-72

Cooling Fan Control System .....	10-74
Component Parts of Cooling System .....	10-79
Control System .....	10-92
Layout Drawing of Control System .....	10-92
Machine Monitor System.....	10-94
Rearview Monitor System .....	10-96
KOMTRAX System .....	10-97
Component Parts of Control System .....	10-98
Hydraulic System .....	10-145
Layout Drawing of Hydraulic System.....	10-145
CLSS .....	10-146
Component Parts of Hydraulic System.....	10-149
Power Train System.....	10-197
Layout Drawing of Power Train System .....	10-197
Operation of Power Train System .....	10-199
Directional Selector Switch Control Function.....	10-200
HST Control System .....	10-202
HST Charge System .....	10-204
HST Pump Control System .....	10-205
HST Controller Gear Shift Control Function .....	10-207
Transfer Clutch Control Function.....	10-210
HST System Protection Function .....	10-211
Maximum Speed Low Fuel Consumption Control.....	10-214
Komatsu Traction Control System (KTCS) .....	10-217
Component Parts of Power Train System.....	10-223
Work Equipment System.....	10-270
Layout Drawing of Work Equipment System .....	10-270
Work Equipment Control System .....	10-272
Work Equipment Lock System .....	10-273
Bucket Positioner System .....	10-275
Fork Positioner System .....	10-279
Remote Positioner System.....	10-283
ECSS.....	10-286
Component Parts of Work Equipment System .....	10-288
Steering System.....	10-303
Layout Drawing of Steering System .....	10-303
Steering Column .....	10-304
Component Parts of Steering System .....	10-305
Brake System.....	10-319
Layout Drawing of Brake System .....	10-319
Parking Brake Control System .....	10-321
Component Parts of Brake System .....	10-325
Auto-Greasing System .....	10-343
Layout Drawing of Auto-Greasing System.....	10-343
Specifications of Auto-Greasing System .....	10-345
Function of Auto-Greasing System.....	10-347
Auto-Greasing System .....	10-348
Undercarriage and Frame .....	10-349
Frame, Axle Mount and Center Hinge Pin .....	10-349
Tires.....	10-354
Work Equipment .....	10-356
Structure of Work Equipment .....	10-356
Structure of Bucket.....	10-357
CAB Related Parts.....	10-358
ROPS CAB .....	10-358
CAB Mount .....	10-359
20 Standard Value Table .....	20-1
Table of Contents .....	20-2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$