

Shop Manual

WHEEL LOADER

WA320-8

SERIAL NUMBERS 85001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL.....	00-27
SAFETY NOTICE FOR OPERATION.....	00-29
PRECAUTIONS TO PREVENT FIRE.....	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-41
PRECAUTIONS FOR DEF.....	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-78
STANDARD TIGHTENING TORQUE TABLE.....	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM.....	10-15
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-32
BOOT-UP SYSTEM	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-41
SYSTEM OPERATING LAMP SYSTEM	10-43
BATTERY DISCONNECT SWITCH	10-44
PREHEATING SYSTEM	10-45
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-47
ENGINE CONTROL SYSTEM	10-49
AUTOMATIC IDLE STOP SYSTEM	10-56
COMPONENT PARTS OF ENGINE SYSTEM	10-57
COOLING SYSTEM.....	10-76

LAYOUT DRAWING OF COOLING SYSTEM	10-76
COOLING FAN CONTROL SYSTEM.....	10-78
COMPONENT PARTS OF COOLING SYSTEM.....	10-83
CONTROL SYSTEM.....	10-96
LAYOUT DRAWING OF CONTROL SYSTEM	10-96
MACHINE MONITOR SYSTEM	10-98
REARVIEW MONITOR SYSTEM.....	10-100
KOMTRAX SYSTEM.....	10-101
COMPONENT PARTS OF CONTROL SYSTEM.....	10-102
HYDRAULIC SYSTEM.....	10-145
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-145
CLSS	10-146
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-149
POWER TRAIN SYSTEM	10-197
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-197
OPERATION OF POWER TRAIN SYSTEM.....	10-199
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-200
HST CONTROL SYSTEM.....	10-202
HST CHARGE SYSTEM.....	10-204
HST PUMP CONTROL SYSTEM.....	10-205
HST CONTROLLER GEAR SHIFT CONTROL FUNCTION.....	10-207
TRANSFER CLUTCH CONTROL FUNCTION.....	10-210
HST SYSTEM PROTECTION FUNCTION.....	10-211
MAXIMUM SPEED LOW FUEL CONSUMPTION CONTROL.....	10-214
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-217
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-222
WORK EQUIPMENT SYSTEM	10-269
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-269
WORK EQUIPMENT CONTROL SYSTEM.....	10-271
WORK EQUIPMENT LOCK SYSTEM.....	10-272
BUCKET POSITIONER SYSTEM.....	10-274
FORK POSITIONER SYSTEM	10-278
REMOTE POSITIONER SYSTEM	10-282
ECSS.....	10-285
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-287
STEERING SYSTEM.....	10-302
LAYOUT DRAWING OF STEERING SYSTEM	10-302
STEERING COLUMN	10-303
COMPONENT PARTS OF STEERING SYSTEM.....	10-304
BRAKE SYSTEM.....	10-317
LAYOUT DRAWING OF BRAKE SYSTEM	10-317
PARKING BRAKE CONTROL SYSTEM	10-319
COMPONENT PARTS OF BRAKE SYSTEM.....	10-323
AUTO-GREASING SYSTEM	10-341
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-341
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-342
FUNCTION OF AUTO-GREASING SYSTEM	10-344
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-345
UNDERCARRIAGE AND FRAME.....	10-346
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-346
TIRE	10-349
WORK EQUIPMENT.....	10-351
STRUCTURE OF WORK EQUIPMENT	10-351
STRUCTURE OF BUCKET.....	10-352
CAB AND ITS ATTACHMENTS	10-353
ROPS CAB	10-353
CAB MOUNT	10-354
20 STANDARD VALUE TABLE	20-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$