

Shop Manual

WHEEL LOADER

WA380 -8

SERIAL NUMBERS 15001 and up
H65051 and up

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-23
FOREWORD, SAFETY, BASIC INFORMATION	00-29
HOW TO READ THE SHOP MANUAL.....	00-29
SAFETY NOTICE FOR OPERATION.....	00-31
PRECAUTIONS TO PREVENT FIRE.....	00-39
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-43
PRECAUTIONS FOR DEF.....	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-80
STANDARD TIGHTENING TORQUE TABLE.....	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-7
UREA SCR SYSTEM.....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-17
FUNCTION OF UREA SCR SYSTEM.....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-35
BOOT-UP SYSTEM	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-44
SYSTEM OPERATING LAMP SYSTEM	10-45
BATTERY DISCONNECT SWITCH	10-46
PREHEATING SYSTEM	10-48
ENGINE SYSTEM	10-50
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-50
ENGINE CONTROL SYSTEM	10-52
ENGINE POWER MODE SELECTOR SYSTEM.....	10-58
AUTOMATIC IDLE STOP SYSTEM	10-60
COMPONENT PARTS OF ENGINE SYSTEM	10-61

COOLING SYSTEM.....	10-79
LAYOUT DRAWING OF COOLING SYSTEM	10-79
COOLING FAN CONTROL SYSTEM.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-87
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM	10-101
MACHINE MONITOR SYSTEM	10-103
REARVIEW MONITOR SYSTEM.....	10-105
KOMTRAX SYSTEM.....	10-106
RDS LOAD METER SYSTEM.....	10-107
COMPONENT PARTS OF CONTROL SYSTEM.....	10-109
HYDRAULIC SYSTEM.....	10-158
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-158
CLSS	10-159
WORK EQUIPMENT PUMP AND STEERING PUMP CONTROL SYSTEM	10-162
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-163
POWER TRAIN SYSTEM	10-237
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-237
OPERATION OF POWER TRAIN SYSTEM.....	10-240
TRANSMISSION CONTROL SYSTEM	10-241
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-243
TRANSMISSION PROTECTION FUNCTION	10-249
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-252
TRANSMISSION CUT-OFF FUNCTION	10-254
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-256
WORK EQUIPMENT SYSTEM	10-307
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-307
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-309
WORK EQUIPMENT CONTROL SYSTEM.....	10-311
WORK EQUIPMENT NEUTRAL LOCK SYSTEM	10-316
REMOTE POSITIONER SYSTEM	10-318
BUCKET POSITIONER AND BOOM POSITIONER.....	10-323
AUTO-DIGGING SYSTEM.....	10-324
SEMI AUTO-DIGGING SYSTEM	10-326
ECSS.....	10-328
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-330
STEERING SYSTEM.....	10-338
LAYOUT DRAWING OF STEERING SYSTEM	10-338
SECONDARY STEERING SYSTEM.....	10-339
STEERING COLUMN	10-341
COMPONENT PARTS OF STEERING SYSTEM.....	10-342
BRAKE SYSTEM.....	10-362
LAYOUT DRAWING OF BRAKE SYSTEM	10-362
PARKING BRAKE CONTROL SYSTEM	10-364
BRAKE COOLING CONTROL SYSTEM.....	10-366
COMPONENT PARTS OF BRAKE SYSTEM.....	10-367
AUTO-GREASING SYSTEM	10-392
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-392
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-393
FUNCTION OF AUTO-GREASING SYSTEM	10-395
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-396
UNDERCARRIAGE AND FRAME.....	10-397
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-397
TIRE	10-399
WORK EQUIPMENT.....	10-401
STRUCTURE OF WORK EQUIPMENT	10-401
STRUCTURE OF BUCKET.....	10-402
CAB AND ITS ATTACHMENTS	10-403

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$