

# Shop Manual

WHEEL LOADER

**WA470-6**

**WA480-6**

SERIAL NUMBERS

WA470-85001 to 90000

WA480-85001 to 90000

**ecot3**

**KOMATSU**



---

# WHEEL LOADER

## WA470-6

## WA480-6

**Machine model      Serial number**

WA470-6              85001 and up  
WA480-6              85001 and up

---

# 00 Index and foreword

## Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00783-10
00 Index and foreword	SEN00785-10
Index	SEN00802-10 ●
Foreword and general information	SEN00803-03
01 Specification	SEN00787-02
Specification and technical data	SEN00804-02
10 Structure, function and maintenance standard	SEN00796-05
Engine and cooling system	SEN01301-01
Power train	SEN01302-02
Steering system	SEN01303-02
Brake system	SEN01304-01
Undercarriage and frame	SEN01305-02
Hydraulic system, Part 1	SEN01306-03
Hydraulic system, Part 2	SEN01307-01
Work equipment	SEN01308-01
Cab and its attachments	SEN01309-02
Electrical system, Part 1	SEN01310-03
Electrical system, Part 2	SEN01311-03 ●
Electrical system, Part 3	SEN01312-02
20 Standard value table	SEN00797-03
Standard service value table	SEN01313-03
30 Testing and adjusting	SEN00798-02
Testing and adjusting, Part 1	SEN01589-02
Testing and adjusting, Part 2	SEN01590-02
Testing and adjusting, Part 3	SEN01591-02
40 Troubleshooting	SEN00799-03
Failure code table and fuse locations	SEN01691-03
General information on troubleshooting	SEN01692-02
Troubleshooting by failure code (Display of code), Part 1	SEN01693-02
Troubleshooting by failure code (Display of code), Part 2	SEN01694-03
Troubleshooting by failure code (Display of code), Part 3	SEN01695-02
Troubleshooting by failure code (Display of code), Part 4	SEN01696-02

Troubleshooting by failure code (Display of code), Part 5	SEN01697-02
Troubleshooting by failure code (Display of code), Part 6	SEN01698-02
Troubleshooting by failure code (Display of code), Part 7	SEN01699-02
Troubleshooting by failure code (Display of code), Part 8	SEN01700-03
Troubleshooting by failure code (Display of code), Part 9	SEN01701-01
Troubleshooting by failure code (Display of code), Part 10	SEN01702-02
Troubleshooting of electrical system (E-mode)	SEN01703-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01704-02
Troubleshooting of engine (S-mode)	SEN01705-02
<b>50 Disassembly and assembly</b>	SEN00800-03
General information on disassembly and assembly	SEN02202-02 ●
Engine and cooling system	SEN02203-01
Power train, Part 1	SEN02204-02
Power train, Part 2	SEN02205-02 ●
Undercarriage and frame	SEN02206-01
Hydraulic system	SEN02207-01
Work equipment	SEN02208-01
Cab and its attachments	SEN02209-01
Electrical system	SEN02210-01
<b>90 Diagrams and drawings</b>	SEN00801-02
Hydraulic diagrams and drawings	SEN00805-00
Electrical diagrams and drawings	SEN00806-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$