

Shop Manual

WHEEL LOADER

WA470-8E0

SERIAL NUMBERS 100439 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-23
FOREWORD, SAFETY, BASIC INFORMATION	00-29
HOW TO READ THE SHOP MANUAL	00-29
SAFETY NOTICE FOR OPERATION	00-31
PRECAUTIONS TO PREVENT FIRE	00-39
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-43
PRECAUTIONS FOR DEF	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-80
STANDARD TIGHTENING TORQUE TABLE	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-7
UREA SCR SYSTEM	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-17
FUNCTION OF UREA SCR SYSTEM	10-18
COMPONENT PARTS OF UREA SCR SYSTEM	10-35
BOOT-UP SYSTEM	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-44
SYSTEM OPERATING LAMP SYSTEM	10-46
BATTERY DISCONNECT SWITCH	10-47
PREHEATING SYSTEM	10-49
ENGINE SYSTEM	10-51
LAYOUT DRAWING OF ENGINE SYSTEM	10-51
ENGINE CONTROL SYSTEM	10-54
ENGINE POWER MODE SELECTOR SYSTEM	10-60
AUTOMATIC IDLE STOP SYSTEM	10-62
COMPONENT PARTS OF ENGINE SYSTEM	10-63

COOLING SYSTEM.....	10-80
LAYOUT DRAWING OF COOLING SYSTEM	10-80
COOLING FAN CONTROL SYSTEM.....	10-83
COMPONENT PARTS OF COOLING SYSTEM.....	10-88
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM	10-101
MACHINE MONITOR SYSTEM	10-103
REARVIEW MONITOR SYSTEM.....	10-105
KOMTRAX SYSTEM.....	10-106
RDS LOAD METER SYSTEM.....	10-107
COMPONENT PARTS OF CONTROL SYSTEM.....	10-109
HYDRAULIC SYSTEM.....	10-158
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-158
CLSS	10-159
WORK EQUIPMENT PUMP AND STEERING PUMP CONTROL SYSTEM	10-162
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-163
POWER TRAIN SYSTEM	10-230
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-230
OPERATION OF POWER TRAIN SYSTEM.....	10-233
TRANSMISSION CONTROL SYSTEM	10-234
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-236
TRANSMISSION PROTECTION FUNCTION	10-242
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-245
TRANSMISSION CUT-OFF FUNCTION	10-247
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-249
WORK EQUIPMENT SYSTEM	10-305
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-305
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-307
WORK EQUIPMENT CONTROL SYSTEM.....	10-309
WORK EQUIPMENT NEUTRAL LOCK SYSTEM	10-313
REMOTE POSITIONER SYSTEM	10-315
BUCKET POSITIONER AND BOOM POSITIONER.....	10-320
AUTO-DIGGING SYSTEM.....	10-321
SEMI AUTO-DIGGING SYSTEM	10-323
ECSS.....	10-325
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-327
STEERING SYSTEM.....	10-335
LAYOUT DRAWING OF STEERING SYSTEM	10-335
SECONDARY STEERING SYSTEM.....	10-336
JOYSTICK STEERING SYSTEM.....	10-338
STEERING COLUMN	10-343
COMPONENT PARTS OF STEERING SYSTEM.....	10-344
BRAKE SYSTEM.....	10-365
LAYOUT DRAWING OF BRAKE SYSTEM	10-365
PARKING BRAKE CONTROL SYSTEM	10-369
BRAKE COOLING CONTROL SYSTEM.....	10-371
COMPONENT PARTS OF BRAKE SYSTEM.....	10-373
AUTO-GREASING SYSTEM	10-399
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-399
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-401
FUNCTION OF AUTO-GREASING SYSTEM	10-403
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-404
UNDERCARRIAGE AND FRAME.....	10-405
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-405
TIRE	10-407
WORK EQUIPMENT.....	10-409
STRUCTURE OF WORK EQUIPMENT	10-409
STRUCTURE OF BUCKET.....	10-410

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$