

Shop Manual

WHEEL LOADER

WA500-7

SERIAL NUMBERS 10001 and up

KOMATSU

SHOP MANUAL

WHEEL LOADER

WA500-7

Model Serial Number

WA500-7 10001 and up

00 Index and foreword

Index

00 Index and foreword	00-1
Index.....	00-2
Foreword, safety and general information.....	00-19
Important safety notice.....	00-19
How to read the shop manual.....	00-26
Explanation of terms for maintenance standard.....	00-28
Handling equipment of fuel system devices.....	00-30
Handling of intake system parts.....	00-31
Handling of hydraulic equipment.....	00-32
Method of disconnecting and connecting of push-pull type coupler.....	00-34
Handling of electrical equipment.....	00-37
How to read electric wire code.....	00-45
Precautions when performing operation.....	00-48
Practical use of KOMTRAX.....	00-53
Standard tightening torque table	00-54
List of abbreviation.....	00-60
Conversion table	00-65
01 Specification	01-1
Table of contents	01-2
Specifications.....	01-3
Specification drawing	01-3
Specification.....	01-5
Weight table	01-12
Table of fuel, coolant, and lubricants.....	01-14
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system.....	10-4
Engine related parts.....	10-4
KVGT	10-6
EGR system piping drawing.....	10-12
EGR system circuit diagram.....	10-14
EGR valve.....	10-15
EGR cooler	10-17
KCCV layout drawing.....	10-19
KCCV ventilator	10-21
KDFF	10-23
Engine mount and transmission mount.....	10-27
Joint	10-28
Cooling system	10-29
Cooling fan pump.....	10-33
Cooling fan motor.....	10-42
Power train	10-49
Power train system	10-49
Drive shaft.....	10-52
Power train piping drawing.....	10-53
Transmission control	10-54
Torque converter	10-56
Torque converter regulator valve	10-63
Transmission.....	10-65
Transfer.....	10-82
Transmission control valve	10-84
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-87
Lockup clutch ECMV	10-94
Main relief valve, torque converter relief valve, and main flow selector valve	10-98
Torque converter oil cooler.....	10-103
Center support	10-104
Lubricating oil relief valve.....	10-105
Axe	10-106

Differential.....	10-110
Final drive	10-120
Steering system.....	10-122
Layout of steering parts	10-122
Steering column	10-123
Joystick steering lever linkage	10-124
Steering pump.....	10-125
Steering control valve	10-137
Orbitrol valve.....	10-147
Stop valve	10-153
Emergency steering piping diagram	10-154
Diverter valve.....	10-155
Emergency steering pump.....	10-159
Brake system.....	10-160
Layout of brake parts	10-160
Charge valve.....	10-162
Brake valve.....	10-168
Slack adjuster	10-173
Accumulator (for brake)	10-176
Brake	10-177
Parking brake control	10-179
Parking brake.....	10-180
Parking brake solenoid valve.....	10-182
Parking brake emergency release valve.....	10-185
Undercarriage and frame	10-186
Axe mount.....	10-186
Center hinge pin	10-187
Tire.....	10-189
Hydraulic system.....	10-191
Hydraulic component layout	10-191
Work equipment control.....	10-193
Hydraulic tank	10-195
Double type gear pump	10-198
Work equipment pump.....	10-199
Control valve.....	10-220
CLSS	10-229
Hydraulic circuit diagram and names of valves	10-233
Accumulator charge valve	10-245
Work equipment lock solenoid valve	10-249
Accumulator (for PPC circuit)	10-250
Accumulator (for ECSS)	10-251
Work equipment	10-252
Work equipment linkage	10-252
Bucket.....	10-253
Bucket positioner and boom positioner.....	10-255
Lubrication of work equipment.....	10-256
Cab and its attachments.....	10-258
ROPS cab.....	10-258
Electrical system	10-259
Engine control system	10-259
Preheating system	10-261
Power mode selector circuit.....	10-263
Engine output limit function.....	10-264
Automatic warm-up function	10-265
Parking brake control system	10-266
System operating lamp function	10-268
Battery disconnect switch function.....	10-270
Backup lamp and brake lamp	10-272
Clearance lamp and headlamp.....	10-274

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$