

Shop Manual

WHEEL LOADER

WA800-3E0

WA900-3E0

SERIAL NUMBERS

WA800-70001

WA900-60001

and up

WHEEL LOADER

WA800-3E0

WA900-3E0

Machine model Serial number

WA800-3E0 70001 and up
WA900-3E0 60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02034-26
00 Index and foreword	SEN02035-26
Index	SEN02036-26
Foreword and general information	SEN02037-06
01 Specification	SEN02038-02
Specification and technical data	SEN02039-02
10 Structure, function and maintenance standard	SEN02040-09
Engine and cooling system	SEN02351-01
Power train, Part 1	SEN02352-01
Power train, Part 2	SEN02470-02
Steering system	SEN02353-01
Brake system	SEN02354-03
Undercarriage and frame	SEN02355-00
Hydraulic system, Part 1	SEN02356-00
Hydraulic system, Part 2	SEN02471-00
Work equipment	SEN02357-00
Cab and its attachments	SEN02358-00
Electrical system, Part 1	SEN02359-00
Electrical system, Part 2	SEN02360-02
Electrical system, Part 3	SEN02361-03
20 Standard value table	SEN02041-03
Standard service value table	SEN02154-03
30 Testing and adjusting	SEN02042-13
Testing and adjusting, Part 1	SEN02155-08
Testing and adjusting, Part 2	SEN02156-06
Testing and adjusting, Part 3	SEN02157-08
40 Troubleshooting	SEN02043-10
Failure code table, fuse and relay locations	SEN02142-05
General information on troubleshooting	SEN02143-03
Troubleshooting by failure code (Display of code), Part 1	SEN02144-01
Troubleshooting by failure code (Display of code), Part 2	SEN02145-01
Troubleshooting by failure code (Display of code), Part 3	SEN02146-02
Troubleshooting by failure code (Display of code), Part 4	SEN02147-02
Troubleshooting by failure code (Display of code), Part 5	SEN02148-02
Troubleshooting by failure code (Display of code), Part 6	SEN02268-01
Troubleshooting of electrical system (E-mode)	SEN02149-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02150-01
Troubleshooting of engine (S-mode)	SEN02151-01
Troubleshooting of machine monitor system (M-mode)	SEN02152-01

Troubleshooting of maintenance monitor system (K-mode)	SEN02153-02
Troubleshooting of remote boom positioner controller system (if equipped) (W-mode)	SEN04494-00
50 Disassembly and assembly	SEN02044-15
General information on disassembly and assembly	SEN02739-05
Engine and cooling system, Part 1	SEN02740-04
Engine and cooling system, Part 2	SEN02741-04
Power train, Part 1	SEN02742-05
Power train, Part 2	SEN02743-01
Power train, Part 3	SEN02744-04
Brake system	SEN02745-05
Undercarriage and frame	SEN02746-03
Hydraulic system	SEN02747-04
Work equipment	SEN02748-01
Cab and its attachments	SEN02749-02
Electrical system	SEN02750-00
90 Diagrams and drawings	SEN02045-05
Hydraulic diagrams and drawings	SEN02046-01
Electrical diagrams and drawings	SEN02047-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$