

Shop Manual

BULLDOZER

D31EX -22

D31PX -22

D37EX -22

D37PX -22

SERIAL NUMBERS 60001 and up

ecot3

KOMATSU

BULLDOZER

D31EX-22

D31PX-22

D37EX-22

D37PX-22

| Machine model | Serial number |
|---------------|---------------|
| D31EX-22 | 60001 and up |
| D31PX-22 | 60001 and up |
| D37EX-22 | 60001 and up |
| D37PX-22 | 60001 and up |

00 Index and foreword

100 Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN04343-09 |
| 00 Index and foreword | SEN04344-09 |
| 100 Index | SEN04352-09 ● |
| 200 Foreword and general information | SEN04353-02 |
| 01 General | SEN04345-00 |
| 100 Specification and technical data | SEN04354-00 |
| 10 Structure, function and maintenance standard..... | SEN04346-01 |
| 100 Engine and cooling system | SEN04484-00 |
| 200 Power train..... | SEN04485-00 |
| 300 Undercarriage and frame | SEN04486-00 |
| 410 Hydraulic system, Part 1 | SEN04487-00 |
| 420 Hydraulic system, Part 2 | SEN04488-00 |
| 500 Work equipment..... | SEN04489-00 |
| 600 Cab and its attachments | SEN04490-00 |
| 700 Electrical system..... | SEN04491-01 ● |
| 20 Standard value table..... | SEN04347-02 |
| 100 Standard service value table..... | SEN04501-02 |
| 30 Testing and adjusting | SEN04348-03 |
| 110 Testing and adjusting, Part 1..... | SEN04502-02 |
| 120 Testing and adjusting, Part 2..... | SEN04503-01 |
| 130 Testing and adjusting, Part 3..... | SEN04504-02 ● |
| 40 Troubleshooting..... | SEN04349-02 |
| 100 Failure code table and fuse locations | SEN04505-01 ● |
| 200 General information on troubleshooting..... | SEN04506-01 |
| 310 Troubleshooting by failure code (Display of code), Part 1 | SEN04507-01 |
| 320 Troubleshooting by failure code (Display of code), Part 2 | SEN04508-02 ● |
| 330 Troubleshooting by failure code (Display of code), Part 3 | SEN04509-00 |
| 340 Troubleshooting by failure code (Display of code), Part 4 | SEN04510-00 |
| 350 Troubleshooting by failure code (Display of code), Part 5 | SEN04511-00 |
| 400 Troubleshooting of electrical system (E-mode)..... | SEN04512-01 ● |
| 500 Troubleshooting of hydraulic and mechanical system (H-mode) | SEN04513-00 |
| 600 Troubleshooting of engine (S-mode)..... | SEN04514-01 |

| | |
|--|---------------|
| 50 Disassembly and assembly | SEN04350-01 |
| 100 General information on disassembly and assembly..... | SEN04724-01 |
| 200 Engine and cooling system | SEN04725-01 |
| 300 Power train | SEN04726-01 |
| 400 Undercarriage and frame | SEN04727-01 |
| 500 Hydraulic system | SEN04728-00 |
| 600 Work equipment | SEN04729-00 |
| 700 Cab and its attachments..... | SEN04730-00 |
| 800 Electrical system | SEN04731-00 |
| 90 Diagrams and drawings..... | SEN04351-04 |
| 100 Hydraulic diagrams and drawings | SEN04355-02 |
| 200 Electrical diagrams and drawings..... | SEN04356-02 ● |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$