

Shop Manual

BULLDOZER

D31EX -22

D31PX -22

D37EX -22

D37PX -22

SERIAL NUMBERS

D31EX-60001

D31PX-60001

D37EX-60001

D37PX-60001

and up

ecot3

KOMATSU

BULLDOZER

D31EX-22

D31PX-22

D37EX-22

D37PX-22

Machine model	Serial number
D31EX-22	60001 and up
D31PX-22	60001 and up
D37EX-22	60001 and up
D37PX-22	60001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04343-12
00 Index and foreword	SEN04344-12
100 Index	SEN04352-12
200 Foreword and general information	SEN04353-03
01 General	SEN04345-00
100 Specification and technical data	SEN04354-00
10 Structure, function and maintenance standard	SEN04346-02
100 Engine and cooling system	SEN04484-00
200 Power train	SEN04485-00
300 Undercarriage and frame	SEN04486-00
410 Hydraulic system, Part 1	SEN04487-00
420 Hydraulic system, Part 2	SEN04488-00
500 Work equipment	SEN04489-00
600 Cab and its attachments	SEN04490-00
700 Electrical system	SEN04491-02
20 Standard value table	SEN04347-02
100 Standard service value table	SEN04501-02
30 Testing and adjusting	SEN04348-03
110 Testing and adjusting, Part 1	SEN04502-02
120 Testing and adjusting, Part 2	SEN04503-01
130 Testing and adjusting, Part 3	SEN04504-02
40 Troubleshooting	SEN04349-02
100 Failure code table and fuse locations	SEN04505-01
200 General information on troubleshooting	SEN04506-01
310 Troubleshooting by failure code (Display of code), Part 1	SEN04507-01
320 Troubleshooting by failure code (Display of code), Part 2	SEN04508-02
330 Troubleshooting by failure code (Display of code), Part 3	SEN04509-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN04510-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN04511-00
400 Troubleshooting of electrical system (E-mode)	SEN04512-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04513-00
600 Troubleshooting of engine (S-mode)	SEN04514-01
50 Disassembly and assembly	SEN04350-02
100 General information on disassembly and assembly	SEN04724-02
200 Engine and cooling system	SEN04725-01
300 Power train	SEN04726-02
400 Undercarriage and frame	SEN04727-01
500 Hydraulic system	SEN04728-00
600 Work equipment	SEN04729-00

700 Cab and its attachments.....	SEN04730-00
800 Electrical system	SEN04731-00
90 Diagrams and drawings.....	SEN04351-05
100 Hydraulic diagrams and drawings	SEN04355-02
200 Electrical diagrams and drawings.....	SEN04356-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$