

Shop Manual

BULLDOZER

D375A-5E0

SERIAL NUMBERS 50001 and up

ecot3

KOMATSU

BULLDOZER

D375A-5E0

Machine model Serial number

D375A-5E0 50001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00986-15
00 Index and foreword	SEN00987-15
Index	SEN00988-15 ●
Foreword and general information	SEN00989-04
01 Specification	SEN00990-01
Specification and technical data	SEN00991-01
10 Structure, function and maintenance standard	SEN00992-05
Engine and cooling system	SEN00993-01
Power train, Part 1	SEN00994-01
Power train, Part 2	SEN00995-02
Undercarriage and frame	SEN00996-03
Hydraulic system, Part 1	SEN00997-01
Hydraulic system, Part 2	SEN00998-01
Work equipment	SEN00999-01
Cab and its attachments	SEN01000-01
Electrical system	SEN01001-03
20 Standard value table	SEN01002-01
Standard service value table	SEN01931-01
30 Testing and adjusting	SEN01003-05
Testing and adjusting, Part 1	SEN01932-02
Testing and adjusting, Part 2	SEN01933-02
Testing and adjusting, Part 3	SEN01934-03
Testing and adjusting, Part 4	SEN01935-03
40 Troubleshooting	SEN01004-02
Failure code table and fuse locations	SEN01867-02
General information on troubleshooting	SEN01868-02
Troubleshooting by failure code, Part 1	SEN01869-01
Troubleshooting by failure code, Part 2	SEN01870-01
Troubleshooting by failure code, Part 3	SEN01871-01
Troubleshooting by failure code, Part 4	SEN01872-01

Troubleshooting by failure code, Part 5	SEN01873-02
Troubleshooting by failure code, Part 6	SEN01874-00
Troubleshooting by failure code, Part 7	SEN01891-00
Troubleshooting of electrical system (E-mode)	SEN01875-02
Troubleshooting of hydraulic, mechanical system (H-mode)	SEN01876-01
Troubleshooting of engine (S-mode)	SEN01877-01
50 Disassembly and assembly	SEN01005-05
General information on disassembly and assembly	SEN02362-04 ●
Engine and cooling system	SEN02363-01
Engine	SEN02364-01
Power train, Part 1	SEN02365-02
Power train, Part 2	SEN02366-02 ●
Undercarriage and frame, Part 1	SEN02367-03
Undercarriage and frame, Part 2	SEN02368-03 ●
Hydraulic system	SEN02369-01
Work equipment	SEN02370-01
Cab and its attachments	SEN02371-01
Electrical system	SEN02372-01
90 Diagrams and drawings	SEN01006-04
Hydraulic diagrams and drawings	SEN01007-02
Electrical diagrams and drawings	SEN01008-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$