

Shop Manual

BULLDOZER

D37EX -24

D37PX -24

D39EX -24

D39PX -24

SERIAL NUMBERS

D37EX-85001

D37PX-85001

D39EX-95001

D39PX-95001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-19
Foreword, Safety, Basic Information	00-25
How to Read the Shop Manual	00-25
Safety Notice for Operation	00-27
Precautions to Prevent Fire	00-35
Procedures If Fire Occurs	00-37
Precautions When You Discard Waste Materials	00-38
Procedures for Exhaust Gas Regulations	00-39
Precautions for DEF	00-40
Store DEF	00-41
Precautions When You Handle Hydraulic Equipment	00-42
Precautions When You Disconnect and Connect Pipings	00-45
Precautions When You Handle Electrical Equipment	00-52
Precautions When You Handle Fuel System Equipment	00-54
Precautions When You Handle Intake System Equipment	00-55
Practical Use of KOMTRAX	00-56
Disconnect and Connect Push-Pull Type Coupler	00-57
Precautions for Disconnection and Connection of Connectors	00-61
Disconnect and Connect Deutsch Connector	00-65
How to Disconnect and Connect Slide Lock Type Connector	00-66
Disconnect and Connect Connector with Lock to Pull	00-68
Disconnect and Connect Connector with Lock to Push	00-69
Disconnect and Connect Connector with Housing to Rotate	00-71
How to Read the Codes for Electric Cable	00-72
Explanation of Terms for Maintenance Standard	00-76
Standard Tightening Torque Table	00-79
Conversion Table	00-86
01 Specification	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-15
Weight Table	01-34
Table of Fuel, Coolant, and Lubricants	01-41
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-5
Urea SCR System	10-11
Layout Drawing of Urea SCR System	10-11
Urea SCR System Diagram	10-13
Function of Urea SCR System	10-14
Component Parts of Urea SCR System	10-30
Boot-up System	10-39
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-39
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-40
System Operating Lamp System	10-41
Battery Disconnect Switch	10-44
Engine System	10-45
Layout Drawing of Engine System	10-45
Engine Control System	10-47
Automatic Idle Stop System	10-59
Component Parts of Engine System	10-63
Cooling System	10-80
Layout Drawing of Cooling System	10-80

Cooling Fan Control System	10-82
Component Parts of Cooling System	10-85
Control System	10-95
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-95
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-96
Machine Monitor System.....	10-97
KOMTRAX System	10-99
Component Parts of Control System	10-101
Hydraulic System	10-138
Layout Drawing of Hydraulic System.....	10-138
CLSS	10-139
Component Parts of Hydraulic System.....	10-142
Power Train System.....	10-175
Layout Drawing of HST System	10-175
Operation of HST System	10-176
Steering and Brake Control System	10-178
HST Control System	10-180
Parking Brake Control System	10-193
Component Parts of Power Train System.....	10-196
Work Equipment System.....	10-233
Work Equipment Control	10-233
Layout Drawing of Front Work Equipment.....	10-237
Layout Drawing of Fixed Multi-Shank Ripper	10-238
Component Parts of Work Equipment System	10-239
Undercarriage and Frame	10-257
Main Frame.....	10-257
Track Frame and Idler Cushion	10-258
Work Equipment	10-261
Structure of Front Work Equipment.....	10-261
Structure of Fixed Multi-Shank Ripper.....	10-262
CAB Related Parts.....	10-263
ROPS CAB	10-263
CAB Mount	10-266
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: D37EX-24.....	20-9
Standard Value Table for Engine: D37PX-24.....	20-12
Standard Value Table for Engine: D39EX-24.....	20-15
Standard Value Table for Engine: D39PX-24.....	20-18
Standard Value Table for Machine.....	20-21
Standard Value Table for Machine: D37EX-24	20-21
Standard Value Table for Machine: D37PX-24	20-37
Standard Value Table for Machine: D39EX-24	20-51
Standard Value Table for Machine: D39PX-24	20-67
Machine Posture and Procedures to Measure Performance	20-81
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Abbreviation List	30-6
Related Information on Testing and Adjusting	30-12
Tools for Testing and Adjusting.....	30-12
Sketch of Tools for Testing and Adjusting	30-19
Engine and Cooling System	30-21
Examine Engine Speed.....	30-21
Examine Exhaust Gas Color	30-23
Examine the Clearance of Exhaust Throttle Valve.....	30-25

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$