

Shop Manual

BULLDOZER

D37EXi -23

D37PXi -23

D39EXi -23

D39PXi -23

SERIAL NUMBERS

D37EXi-80179

D37PXi-80179

D39EXi-90404

D39PXi-90404

and up

BULLDOZER

D37EXI-23
D37PXI-23
D39EXI-23
D39PXI-23

Model Serial Number

D37EXI-23	80179 and up
D37PXI-23	80179 and up
D39EXI-23	90404 and up
D39PXI-23	90404 and up

00 Index and foreword

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-15
Important safety notice	00-15
How to read the shop manual	00-22
Explanation of terms for maintenance standard	00-24
Handling equipment of fuel system devices	00-26
Handling of intake system parts	00-27
Handling of hydraulic equipment	00-28
Method of disconnecting and connecting of push-pull type coupler	00-30
Handling of electrical equipment	00-33
How to read electric wire code	00-41
Precautions when performing operation	00-44
Practical use of KOMTRAX	00-49
Standard tightening torque table	00-50
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-7
Weight table	01-27
Table of fuel, coolant, and lubricants	01-35
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
Variable flow turbocharger	10-5
EGR system piping drawing	10-9
EGR system circuit diagram	10-11
EGR valve	10-12
EGR cooler	10-14
KCCV layout drawing	10-16
KCCV ventilator	10-18
KDOC muffler	10-22
Cooling system	10-24
Cooling fan motor	10-26
Oil cooler bypass and HST charge safety valve	10-34
Power train	10-41
Power train system	10-41
Damper	10-44
Hydraulic component layout of HST	10-45
Steering and brake control	10-46
HST pump	10-48
HST motor	10-62
Charge pump	10-78
Solenoid valve	10-79
Final drive	10-89
Undercarriage and frame	10-93
Main frame	10-93
Track frame and idler cushion	10-94
Hydraulic system	10-96
Hydraulic component layout of work equipment	10-96
Work equipment control system	10-98
Hydraulic tank	10-100
CLSS	10-102
Work equipment and cooling fan pump	10-105

Control valve	10-116
Ripper PPC valve.....	10-133
Angle control EPC valve	10-138
Accumulator	10-143
Work equipment	10-145
Blade	10-145
Ripper.....	10-146
Piston valve.....	10-147
Cab and its attachments.....	10-148
ROPS cab	10-148
Cab mount	10-150
Electrical system	10-151
Electrical control system	10-151
Machine monitor system.....	10-193
KOMTRAX system.....	10-215
System component parts	10-219
Sensor	10-245
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-4
Standard value table for electrical system.....	20-21
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Sketch of tools for testing and adjusting	30-7
Engine and cooling system.....	30-11
Testing engine speed	30-11
Testing exhaust gas color	30-13
Testing and adjusting valve clearance.....	30-15
Testing compression pressure.....	30-17
Testing blowby pressure	30-20
Testing engine oil pressure	30-21
Visual check inside of EGR valve	30-21-1
Clean inside of EGR valve	30-21-2
Testing fuel pressure	30-22
Testing fuel return rate and leakage	30-23
Bleeding air from fuel system	30-26
Testing fuel circuit for leakage	30-27
Handling cylinder cutout mode operation.....	30-28
Handling no-injection cranking operation.....	30-29
Testing of installed condition of cylinder heads and manifolds	30-30
Testing engine piping for damage and looseness	30-31
Check alternator and air conditioner compressor belt, replace.....	30-32
Check auto-tensioner, replace.....	30-34
Writing compensation values at replacement of injector and engine controller	30-36
Power train.....	30-40
Testing and adjusting HST oil pressure.....	30-40
Testing outlet pressure of solenoid valve	30-45
Testing if machine travels straight	30-49
Simple test procedure for brake performance	30-50
Adjusting deceleration/brake pedal	30-51
Adjusting parking brake lever	30-54
Move disabled machine urgently	30-56
Undercarriage and frame.....	30-59
Adjusting idler clearance.....	30-59
Checking sprocket wear	30-60
Testing and adjusting track tension	30-61

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$