

Shop Manual

BULLDOZER

D39EX -22

D39PX -22

SERIAL NUMBERS

D39EX-3001

D39PX-3001

and up

ecot3

KOMATSU

BULLDOZER

D39EX-22

D39PX-22

Machine model	Serial number
D39EX-22	3001 and up
D39PX-22	3001 and up

00 Index and foreword

100 Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04041-09
00 Index and foreword	SEN04042-09
100 Index	SEN04050-09
200 Foreword and general information	SEN04051-03
01 General	SEN04043-01
100 Specification and technical data	SEN04052-01
10 Structure, function and maintenance standard	SEN04044-03
100 Engine and cooling system	SEN04230-00
200 Power train	SEN04231-01
300 Undercarriage and frame	SEN04232-01
410 Hydraulic system, Part 1	SEN04233-01
420 Hydraulic system, Part 2	SEN04234-01
500 Work equipment	SEN04236-01
600 Cab and its attachments	SEN04237-01
700 Electrical system	SEN04238-03
20 Standard value table	SEN04045-00
100 Standard service value table	SEN04096-00
30 Testing and adjusting	SEN04046-03
110 Testing and adjusting, Part 1	SEN04097-03
120 Testing and adjusting, Part 2	SEN04098-00
130 Testing and adjusting, Part 3	SEN04099-00
40 Troubleshooting	SEN04047-04
100 Failure code table and fuse locations	SEN04100-01
200 General information on troubleshooting	SEN04101-02
310 Troubleshooting by failure code (Display of code), Part 1	SEN04102-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN04103-02
330 Troubleshooting by failure code (Display of code), Part 3	SEN04104-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN04105-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN04106-00
400 Troubleshooting of electrical system (E-mode)	SEN04107-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04108-01
600 Troubleshooting of engine (S-mode)	SEN04109-01
50 Disassembly and assembly	SEN04048-06
100 General information on disassembly and assembly	SEN04662-05
200 Engine and cooling system	SEN04663-02
300 Power train	SEN04664-02
400 Undercarriage and frame	SEN04665-01
500 Hydraulic system	SEN04666-01
600 Work equipment	SEN04667-01

700 Cab and its attachments.....	SEN04668-02
800 Electrical system	SEN04669-01
90 Diagrams and drawings.....	SEN04049-03
100 Hydraulic diagrams and drawings	SEN04053-00
200 Electrical diagrams and drawings.....	SEN04054-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$