

Shop Manual

BULLDOZER

D63E-12

SERIAL NUMBERS 2001 and up

KOMATSU

BULLDOZER

D63E-12

Machine model	Serial number
D63E-12	2001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04151-00
00 Index and foreword	SEN04152-00
100 Index	SEN04160-00
200 Foreword and general information	SEN04161-00
01 Specification	SEN04153-00
100 Index	SEN04629-00
10 Structure, function and maintenance standard	SEN04154-00
100 Engine and cooling system	SEN04630-00
210 Power train, Part 1	SEN04631-00
220 Power train, Part 2	SEN04632-00
300 Undercarriage and frame	SEN04633-00
410 Hydraulic system, Part 1	SEN04634-00
420 Hydraulic system, Part 2	SEN04635-00
500 Work equipment	SEN04636-00
600 Cab and its attachments	SEN04637-00
700 Electrical system	SEN04638-00
20 Standard value table	SEN04155-00
100 Standard service value table	SEN04589-00
30 Testing and adjusting	SEN04156-00
110 Testing and adjusting, Part 1	SEN04590-00
120 Testing and adjusting, Part 2	SEN04591-00
40 Troubleshooting	SEN04157-00
100 General information on troubleshooting	SEN04592-00
200 Troubleshooting of electrical system (E-mode)	SEN04593-00
300 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04594-00
400 Troubleshooting of engine (S-mode)	SEN04595-00
500 Troubleshooting of machine monitor system (M-mode)	SEN04596-00
50 Disassembly and assembly	SEN04158-00
100 General information on disassembly and assembly	SEN04671-00
200 Engine and cooling system	SEN04672-00

310 Power train, Part 1.....	SEN04673-00
320 Power train, Part 2.....	SEN04674-00
400 Undercarriage and frame	SEN04675-00
500 Hydraulic system.....	SEN04676-00
600 Work equipment	SEN04677-00
700 Cab and its attachments.....	SEN04678-00
90 Diagrams and drawings.....	SEN04159-00
100 Hydraulic diagrams and drawings	SEN04639-00
200 Electrical diagrams and drawings.....	SEN04640-00

Table of contents

00 Index and foreword	
100 Index	SEN04160-00
Composition of shop manual.....	2
Table of contents	4
200 Foreword and general information	
SEN04161-00	
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
100 Specification and technical data.....	
SEN04629-00	
Specification drawing	2
Specifications	3
Weight table	6
Table of fuel, coolant and lubricants.....	8
10 Structure, function and maintenance standard	
100 Engine and cooling system.....	
SEN04630-00	
Radiator, power train, oil cooler.....	2
Engine control	4
210 Power train, Part 1	
SEN04631-00	
Power train system.....	2
Power train skeleton.....	3
Power train unit	4
Power train hydraulic piping diagram.....	5
Transmission, steering and brake control	6
Damper, universal joint.....	8
Torque converter and PTO	11
Transmission	16
Transmission control valve.....	26
Main relief valve	32
Lubrication relief valve	35
Power train oil filter.....	36
Final drive.....	38
220 Power train, Part 2	
SEN04632-00	
Bevel gear shaft, steering clutch and brake	2
Brake valve	12
Reducing valve.....	17
Scavenging pump strainer	18
Power train pump strainer	19
300 Undercarriage and frame	
SEN04633-00	
Main frame	2
Suspension	4
Track frame	7
Recoil spring	8
Idler	10
Track roller	12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$