

Shop Manual

BULLDOZER

D65EX -18

D65PX -18

D65WX -18

SERIAL NUMBERS D65EX- 90997
 D65PX- 90997 and up
 D65WX-90997

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-40
PRECAUTIONS FOR DEF.....	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX.....	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-77
STANDARD TIGHTENING TORQUE TABLE.....	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-15
WEIGHT TABLE	01-36
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-46
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM.....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-30
BOOT-UP SYSTEM.....	10-39
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-39
SYSTEM OPERATING LAMP SYSTEM	10-41
BATTERY DISCONNECT SWITCH	10-43
ENGINE SYSTEM	10-45
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-45
ENGINE CONTROL SYSTEM	10-47
AUTOMATIC IDLE STOP SYSTEM	10-52
COMPONENT PARTS OF ENGINE SYSTEM	10-55
COOLING SYSTEM.....	10-75
LAYOUT DRAWING OF COOLING SYSTEM	10-75

COOLING FAN CONTROL SYSTEM.....	10-77
COMPONENT PARTS OF COOLING SYSTEM.....	10-80
CONTROL SYSTEM.....	10-97
LAYOUT DRAWING OF CONTROL SYSTEM	10-97
MACHINE MONITOR SYSTEM	10-98
KOMTRAX SYSTEM.....	10-99
COMPONENT PARTS OF CONTROL SYSTEM.....	10-100
HYDRAULIC SYSTEM.....	10-129
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-129
CLSS	10-130
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-133
POWER TRAIN SYSTEM	10-184
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-184
OPERATION OF POWER TRAIN SYSTEM.....	10-186
TRANSMISSION, STEERING, AND BRAKE CONTROL	10-187
PALM COMMAND CONTROL SYSTEM.....	10-189
HSS SYSTEM.....	10-193
CENTRALIZED PRESSURE PICKUP PORT.....	10-196
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-197
WORK EQUIPMENT SYSTEM	10-267
WORK EQUIPMENT CONTROL	10-267
LAYOUT OF TILT DOZER, POWER TILT PITCH DOZER AND ANGLE DOZER SERIES.....	10-270
LAYOUT OF POWER ANGLE POWER TILT DOZER SERIES	10-271
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-272
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-273
UNDERCARRIAGE AND FRAME.....	10-302
MAIN FRAME	10-302
SUSPENSION	10-304
TRACK FRAME AND IDLER CUSHION	10-307
WORK EQUIPMENT.....	10-310
STRUCTURE OF FRONT WORK EQUIPMENT (FOR TILT DOZER AND POWER TILT PITCH DOZER SERIES).....	10-310
STRUCTURE OF FRONT WORK EQUIPMENT (FOR POWER ANGLE POWER TILT DOZER SERIES).....	10-311
STRUCTURE OF FRONT WORK EQUIPMENT (ANGLE DOZER SERIES)	10-312
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-313
CAB AND ITS ATTACHMENTS	10-314
ROPS CAB	10-314
CAB MOUNT	10-316
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: D65EX-18	20-9
STANDARD VALUE TABLE FOR ENGINE: D65PX-18	20-14
STANDARD VALUE TABLE FOR ENGINE: D65WX-18	20-19
STANDARD VALUE TABLE FOR MACHINE.....	20-24
STANDARD VALUE TABLE FOR MACHINE: D65EX-18	20-24
STANDARD VALUE TABLE FOR MACHINE: D65PX-18	20-40
STANDARD VALUE TABLE FOR MACHINE: D65WX-18	20-56
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-71
STANDARD VALUE TABLE FOR ELECTRICAL	20-74
STANDARD VALUE TABLE FOR ELECTRICITY	20-74
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$