

Shop Manual

ENGINE

12V140E -7 SERIES

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-4
Foreword, Safety, Basic Information	00-10
How to Read the Engine Shop Manual	00-10
Safety Notice for Operation	00-12
Precautions to Prevent Fire	00-20
Procedures If Fire Occurs	00-22
Precautions for Disposing of Waste Materials	00-23
Engine Technology to Conform Exhaust Gas Emission	00-24
Precautions When You Handle Hydraulic Equipment	00-25
Precautions When You Disconnect and Connect Pipings	00-28
Precautions When You Handle Electrical Equipment	00-35
Precautions When You Handle Fuel System Equipment	00-37
Precautions When You Handle Intake System Equipment	00-38
Disconnect and Connect Push-Pull Type Coupler	00-39
Precautions for Disconnection and Connection of Connectors	00-43
How to Disconnect and Connect Deutsch Connector	00-47
How to Disconnect and Connect Slide Lock Type Connector	00-48
How to Disconnect and Connect Connector with Lock to Pull	00-50
How to Disconnect and Connect Connector with Lock to Push	00-51
How to Disconnect and Connect Connector with Housing to Rotate	00-53
How to Read the Codes for Electric Cable	00-54
Explanation of Terms for Maintenance Standard	00-58
Standard Tightening Torque Table	00-61
Conversion Table	00-68
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Outline of Exhaust Gas Regulation	01-9
List of Applicable Machines: 12V140E-7	01-13
Specifications	01-14
Engine General View	01-22
Weight Table	01-50
Engine Performance Curve	01-55
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-5
Engine System	10-11
Layout of Engine Components	10-11
Intake and Exhaust System Parts	10-13
Engine Main Body Parts	10-23
Turbocharger System	10-40
Lubrication System	10-74
Fuel System	10-86
Cooling System	10-113
Electrical System	10-124
Component Parts of Electrical System	10-124
Sensor	10-167
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: SAA12V140E-7 (D475A-8, D475A-8E0, D475AI-8, D475AI-8E0)	20-9
Standard Value Table for Engine: SAA12V140E-7 (D475A-8R, D475AI-8R)	20-11

Standard Value Table for Engine: SAA12V140E-7 (HD785-8, HD785-8E0)	20-13
Standard Value Table for Engine: SAA12V140E-7 (PC2000-11, PC2000-11E0).....	20-15
Standard Value Table for Engine: SAA12V140E-7 (PC2000-11R).....	20-17
Standard Value Table for Engine: SAA12V140E-7 (WA800-8, WA800-8E0, WA900-8, WA900-8E0)	20-19
Standard Value Table for Engine: SAA12V140E-7 (WA900-8R).....	20-21
Machine Posture and Procedures to Measure Performance	20-23
Running-in Standard and Performance Test Standard	20-24
Running-in Standard and Performance Test Standard: SAA12V140E-7 (D475A-8, D475A-8E0, D475AI-8, D475AI-8E0).....	20-24
Running-in Standard and Performance Test Standard: SAA12V140E-7 (D475A-8R, D475AI-8R) .	20-26
Running-in Standard and Performance Test Standard: SAA12V140E-7 (HD785-8, HD785-8E0)...	20-28
Running-in Standard and Performance Test Standard: SAA12V140E-7 (PC2000-11, PC2000-11E0).....	20-30
Running-in Standard and Performance Test Standard: SAA12V140E-7 (PC2000-11R)	20-32
Running-in Standard and Performance Test Standard: SAA12V140E-7 (WA800-8, WA800-8E0) ..	20-34
Running-in Standard and Performance Test Standard: SAA12V140E-7 (WA900-8, WA900-8E0) ..	20-36
Running-in Standard and Performance Test Standard: SAA12V140E-7 (WA900-8R)	20-38
50 Disassembly and Assembly	50-1
Table of Contents	50-2
Precautions Before Work	50-5
Abbreviation List	50-6
Related Information on Disassembly and Assembly	50-12
How to Read This Manual	50-12
Coating Materials List.....	50-13
Special Tool List.....	50-18
Sketches of Special Tools	50-21
Engine System.....	50-23
How to Disassemble Engine Generally	50-23
How to Assemble Engine Generally	50-301
60 Maintenance Standard	60-1
Table of Contents	60-2
Abbreviation List	60-3
Engine System.....	60-9
Intake and Exhaust System Parts	60-9
Engine Main Body Parts.....	60-12
Lubrication System.....	60-38
Cooling System.....	60-43
Index.....	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$