

Shop Manual

FORKLIFT TRUCK

FE25-2

FE30-2

SERIAL NUMBERS

FE25-320001

FE30-320001

and up

KOMATSU

00 Index and Foreword

Index

| | |
|--|--------|
| 00 Index and Foreword | 00-1 |
| Foreword, Safety, Basic Information | 00-14 |
| How to Read the Shop Manual | 00-14 |
| Safety Notice for Operation | 00-16 |
| Precautions to Prevent Fire | 00-26 |
| Procedures If Fire Occurs | 00-27 |
| Precautions When You Discard Waste Materials | 00-28 |
| Precautions When You Handle Hydraulic Equipment | 00-29 |
| Precautions When You Disconnect and Connect Pipings | 00-31 |
| Precautions When You Handle Electrical Equipment | 00-37 |
| Practical Use of KOMTRAX | 00-39 |
| Disconnect and Connect Push-Pull Type Coupler | 00-40 |
| Precautions for Disconnection and Connection of Connectors | 00-44 |
| Standard Torque Table | 00-54 |
| Conversion Table | 00-61 |
| Abbreviation List | 00-66 |
| 01 Specifications | 01-1 |
| Table of Contents | 01-2 |
| Specifications | 01-3 |
| Specification Drawing | 01-3 |
| Specifications | 01-7 |
| Weight Table | 01-15 |
| Fuel, Coolant, Lubricant | 01-18 |
| 10 Structure and Function | 10-1 |
| Table of Contents | 10-2 |
| Charge System | 10-5 |
| Layout Drawing of Charge System | 10-5 |
| Component Parts of Charge System | 10-6 |
| Boot-up System | 10-27 |
| Layout Drawing of Boot-up System | 10-27 |
| System Operating Lamp System | 10-28 |
| Emergency Stop Switch | 10-30 |
| ID Key System | 10-31 |
| Component Parts of Boot-Up System | 10-33 |
| Control System | 10-36 |
| Layout Drawing of Control System | 10-36 |
| Monitor Panel System | 10-37 |
| KOMTRAX System | 10-39 |
| Seat Belt Interlock System | 10-40 |
| Impact Detection System | 10-42 |
| Inclination Warning System | 10-44 |
| Fall Detection System | 10-46 |
| Component Parts of Control System | 10-47 |
| Hydraulic System | 10-83 |
| Layout Drawing of Hydraulic System | 10-83 |
| Lift Interlock System | 10-84 |
| Component Parts of Hydraulic System | 10-86 |
| Power Train System | 10-108 |
| Layout Drawing of Power Train System | 10-108 |
| Operation of Power Train System | 10-109 |
| Directional Lever Warning System | 10-110 |
| Travel Interlock System | 10-112 |
| Travel Speed Limit System at Lifting Height | 10-114 |
| Reverse Travel Control System on Slope | 10-116 |
| Power Assist System on Slope | 10-118 |
| Component Parts of Power Train System | 10-120 |

| | |
|--|--------|
| Work Equipment System..... | 10-134 |
| Layout Drawing of Work Equipment System | 10-134 |
| Structure of Valve Control | 10-135 |
| Steering System..... | 10-136 |
| Layout Drawing of Steering System | 10-136 |
| Steering Column | 10-137 |
| EPACS System | 10-138 |
| Turning Speed Limit System | 10-139 |
| Component Parts of Steering System | 10-141 |
| Brake System..... | 10-144 |
| Layout Drawing of Brake System | 10-144 |
| Parking Brake Warning System..... | 10-145 |
| Parking Brake Dragging Warning System | 10-147 |
| Component Parts of Brake System | 10-149 |
| Undercarriage and Frame | 10-155 |
| Frame | 10-155 |
| Tires..... | 10-156 |
| Work Equipment | 10-157 |
| Structure of Work Equipment | 10-157 |
| Function of Work Equipment | 10-158 |
| CAB Related Parts..... | 10-159 |
| Head Guard | 10-159 |
| CAB | 10-160 |
| 20 Standard Value Table | 20-1 |
| Table of Contents | 20-2 |
| Standard Value Table for Machine..... | 20-3 |
| Standard Value Table for Vehicle: FE25-2 | 20-3 |
| Standard Value Table for Vehicle: FE30-2 | 20-7 |
| Procedures To Measure Performance | 20-10 |
| 30 Testing and Adjusting | 30-1 |
| Table of Contents | 30-2 |
| Precautions Before Work | 30-4 |
| Related Information on Testing and Adjusting | 30-5 |
| Tools for Testing and Adjusting..... | 30-5 |
| Power Train..... | 30-6 |
| Adjust Accelerator Pedal | 30-6 |
| Examine Oil Level in Differential Case, Change Oil..... | 30-8 |
| Steering System..... | 30-10 |
| Examine Play of Steering Wheel | 30-10 |
| Adjust Tire Angle Sensor..... | 30-11 |
| Brake System..... | 30-12 |
| Adjust Parking Brake Lever..... | 30-12 |
| Adjust Brake Pedal | 30-13 |
| Examine and Adjust Brake Pedal Angle Sensor..... | 30-14 |
| Examine and Adjust Disc Brake | 30-15 |
| Bleed Air from Brake Circuit..... | 30-19 |
| Examine Brake Performance | 30-21 |
| Hydraulic System | 30-22 |
| Release Remained Pressure in Hydraulic Circuit..... | 30-22 |
| Examine Steering Circuit Oil Pressure | 30-23 |
| Measure Oil Pressure of Work Equipment | 30-26 |
| How to Examine Oil Level in Hydraulic Tank, Change Oil..... | 30-29 |
| Bleed Air from Hydraulic Circuit | 30-31 |
| Lower Fork Manually..... | 30-32 |
| Work Equipment | 30-35 |
| Examine and Adjust Work Equipment Lever | 30-35 |
| Examine Hydraulic Drift and Forward Tilt of Work Equipment | 30-37 |
| Adjust Mast | 30-39 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$