

SERVICE MANUAL

FH-2 Series Forklift Truck

Serial No. 140001~

FH35-2

FH40-2

FH45-2

FH50-2

FH-2



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.

KOMATSU®

REVISION: DECEMBER 2019

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A. nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2017, Komatsu Forklift U.S.A., LLC. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

CONTENTS

Page No.

00 Foreword

Safety and basic information	00-3
Composition of the shop manual	00-3
Safety notice for operation	00-4
Safety points	00-4
General precautions	00-5
Precautions for preparatory work	00-5
Precautions during work	00-6
Precautions for slinging work and making signals	00-7
Precautions for slinging up	00-8
Precautions for slinging down	00-8
Precautions for using mobile crane	00-8
Precautions for using overhead traveling crane	00-8
Selecting wire ropes	00-9
Precautions for slinging lift truck onto the trailer	00-9
Precautions for jacking-up lift truck to check or replace a tire	00-10
Precautions for slinging lift truck when checking or replacing a tire	00-10
Precautions for inspection and inflation of the tire	00-10
Handling of tires	00-10
Precautions for disconnecting air conditioner piping	00-11
Precautions for installing air conditioner piping	00-11
Precautions to prevent fire	00-12
Fire caused by fuel, oil, coolant or window washer fluid	00-12
Fire caused by accumulation or attachment of flammable material	00-12
Fire coming from electric wiring	00-12
Fire caused by piping	00-12
Fire around the machine due to highly heated exhaust gas	00-12
Explosion caused by lighting equipment	00-12
Action if fire occurs	00-13
Precautions for handling hydraulic equipment	00-14
Select an appropriate workplace	00-14
Disassembly and maintenance work in the field	00-14
Sealing openings to prevent oil leaks	00-14
Preventing intrusion of foreign materials during refilling	00-14
Replacing high temperature hydraulic oil	00-14
Flushing operation	00-15
Cleaning operation	00-15

Precautions for disconnecting and connecting piping	00-16
Precautions for removal and disassembling work	00-16
Parts list for the disassembly of face seal type hoses and tubes	00-16
Parts list for the disconnection of the taper seal type hoses and tubes	00-17
Parts list for the disconnection of the split flange type hoses and tubes	00-18
Parts list for the removal of O-ring boss type joint	00-19
Parts list for the removal of taper pipe thread type joint.	00-20
Precautions for installation and assembling work	00-21
Precautions when work is completed.	00-22
Precautions for handling electrical equipment.	00-23
Handling wiring harnesses and connectors	00-23
Main causes of failure in wiring harness	00-23
Precautions for handling fuel system equipment.	00-25
Select an appropriate workplace	00-25
Seal the openings	00-25
Clean dirty parts.	00-25
Precautions for replacing fuel filter cartridge	00-25
Precautions for handling intake system equipment.	00-26
Select an appropriate workplace	00-26
Seal the openings	00-26
Practical use of KOMTRAX	00-27
Merit of using KOMTRAX.	00-27
How to use KOMTRAX practically	00-27
How to operate KOMTRAX	00-27
Disconnect and connect push-pull type coupler	00-28
Type 1 push-pull type coupler	00-28
Type 2 push-pull type coupler	00-30
Type 3 push-pull type coupler	00-31
Precautions for disconnection and connection of connectors.	00-32
Disconnecting connectors	00-32
Connecting connectors	00-33
Drying wiring harness	00-34
Handling controller	00-35
Precautions for troubleshooting electrical circuits	00-35
Connector coupling and decoupling	00-36
Deutsch connector	00-36
Connector with slide lock	00-37
Connector with pull lock	00-39
Connector with push lock.	00-40
Connector with rotating housing	00-42

How to read electrical wire code	00-43
Type, symbol, and material (Table 1)	00-44
Dimensions (Table 2)	00-45
Color codes (Table 3)	00-47
Types of circuits and color codes	00-48
Explanation of terms for maintenance standard	00-49
Standard dimension and tolerance	00-49
Standard clearance and standard value	00-49
Standard interference	00-49
Repair limit and allowable value or allowable dimension	00-50
Allowable clearance	00-50
Allowable interference	00-50
Abbreviation list	00-51
List of abbreviations used in the text	00-51
List of abbreviations used in the circuit diagrams	00-57
Standard tightening torque tables	00-58
Tightening torque for bolts and nuts	00-58
Tightening torque for O-ring boss piping joints	00-62
Tightening torque for O-ring boss plugs	00-63
Tightening torque for hose (taper seal type and face seal type)	00-64
Tightening torque for face seal joints	00-65
Tightening torque for 102, 107, and 114 series engines	00-65
Tightening torque for 102, 107, and 114 series engines (joint bolts)	00-66
Tightening torque for tapered screws on 102,107, and 114 series engines	00-66
Conversion tables	00-67

01 General Information

Specification Drawing	01-3
Weight Table	01-5
Lubricants	01-6
Lubrication chart	01-6
Lubricant list	01-7

10 Structure and function

Engine and cooling system	10-3
Variable flow turbocharger	10-3
Piping drawing of EGR system	10-7
Circuit diagram of EGR system	10-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$