

Shop Manual

FORKLIFT TRUCK

FH100-1

FH120-1

FH135-1

FH160-1

SERIAL NUMBERS

FH100-7001

FH120-7001

FH135-7001

FH160-7001

and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD

INDEX	00-2
LIST OF ABBREVIATIONS	00-17
FOREWORD, SAFETY AND GENERAL INFORMATION	00-22
HOW TO READ THE SHOP MANUAL	00-22
PRECAUTIONS RELATED TO WORK SAFETY	00-24
FIRE PREVENTION	00-33
IF A FIRE BREAKS OUT	00-35
INSTRUCTIONS FOR WASTE DISPOSAL	00-36
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-37
HANDLING INSTRUCTIONS OF DEF	00-38
REGARDING STORAGE OF DEF	00-39
REGARDING HANDLING OF DEF IN COLD WEATHER	00-39
INSTRUCTIONS FOR HANDLING HYDRAULIC COMPONENTS	00-40
INSTRUCTIONS FOR DISCONNECTING AND CONNECTING PIPING	00-42
INSTRUCTIONS FOR HANDLING ELECTRIC COMPONENTS	00-50
INSTRUCTIONS FOR HANDLING FUEL SYSTEM COMPONENTS	00-52
INSTRUCTIONS FOR HANDLING INTAKE SYSTEM COMPONENTS	00-53
PRECAUTIONS FOR REPLACING HST CONTROLLER AND MONITOR PANEL	00-54
USE OF KOMTRAX	00-55
DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER	00-56
INSTRUCTIONS FOR DISCONNECTING AND CONNECTING CONNECTORS	00-60
HOW TO DISCONNECT AND CONNECT DT CONNECTORS	00-65
HOW TO DISCONNECT AND CONNECT SLIDE LOCK TYPE CONNECTORS	00-66
HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE PULLING LOCK	00-68
HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE PRESSING LOCK	00-69
HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE TURNING HOUSING	00-71
HOW TO READ ELECTRIC WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-78
STANDARD TIGHTENING TORQUE TABLE	00-80
UNIT CONVERSION TABLE	00-87

01 SPECIFICATION

LIST OF ABBREVIATIONS	01-3
SPECIFICATIONS	01-8
SPECIFICATION DRAWING	01-8
SPECIFICATIONS	01-16
WEIGHT TABLE	01-32
FUEL, COOLANT, AND LUBRICANT	01-36

10 STRUCTURE AND FUNCTION

LIST OF ABBREVIATIONS	10-5
UREA SCR SYSTEM	10-10
UREA SCR SYSTEM COMPONENT LAYOUT DRAWING	10-10
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM	10-14
UREA SCR SYSTEM COMPONENTS	10-32
STARTING SYSTEM	10-41
STARTING SYSTEM COMPONENT LAYOUT DRAWING	10-41
SYSTEM OPERATING LAMP SYSTEM	10-42
PREHEATING SYSTEM	10-43
ENGINE SYSTEM	10-45
ENGINE SYSTEM COMPONENT LAYOUT DRAWING	10-45
ENGINE CONTROL SYSTEM	10-46
AUTOMATIC ENGINE STOP SYSTEM	10-48
AUTOMATIC ENGINE POWER CONTROL SYSTEM	10-51
ENGINE SYSTEM COMPONENTS	10-54

COOLING SYSTEM	10-69
COOLING SYSTEM COMPONENT LAYOUT DRAWING	10-69
CONTROL SYSTEM	10-71
CONTROL SYSTEM COMPONENT LAYOUT DRAWING	10-71
MONITOR PANEL SYSTEM	10-73
REARVIEW MONITOR SYSTEM	10-74
KOMTRAX SYSTEM	10-75
SEAT BELT INTERLOCK SYSTEM	10-76
CONTROL SYSTEM COMPONENTS	10-78
HYDRAULIC SYSTEM	10-109
HYDRAULIC SYSTEM COMPONENT LAYOUT DRAWING	10-109
CLSS	10-110
HYDRAULIC SYSTEM COMPONENTS	10-112
POWER TRAIN SYSTEM	10-142
POWER TRAIN SYSTEM COMPONENT LAYOUT DRAWING	10-142
TRAVEL SPEED LIMIT SYSTEM	10-144
DIRECTIONAL LEVER NEUTRAL ALARM SYSTEM	10-145
TRAVEL INTERLOCK SYSTEM	10-146
POWER TRAIN SYSTEM COMPONENTS	10-148
WORK EQUIPMENT SYSTEM	10-179
WORK EQUIPMENT SYSTEM COMPONENT LAYOUT DRAWING	10-179
STRUCTURE OF VALVE CONTROL	10-180
LIFT INTERLOCK SYSTEM	10-181
WORK EQUIPMENT SYSTEM COMPONENTS	10-183
STEERING SYSTEM	10-189
STEERING SYSTEM COMPONENT LAYOUT DRAWING	10-189
ELECTRONIC PROPORTIONAL ACTIVE CONTROL STEERING (EPACS) SYSTEM	10-190
STEERING COLUMN	10-192
STEERING SYSTEM COMPONENT	10-193
BRAKE SYSTEM	10-199
BRAKE SYSTEM COMPONENT LAYOUT DRAWING	10-199
PARKING BRAKE REMINDER SYSTEM	10-200
PARKING BRAKE DRAGGING PREVENTION SYSTEM	10-202
BRAKE SYSTEM COMPONENTS	10-204
UNDERCARRIAGE AND FRAME	10-214
STRUCTURE OF FRAME	10-214
TIRE	10-215
WORK EQUIPMENT	10-216
STRUCTURE OF WORK EQUIPMENT	10-216
CAB AND ITS ATTACHMENTS	10-217
CAB	10-217
20 STANDARD VALUE TABLE	
LIST OF ABBREVIATIONS	20-3
STANDARD VALUE TABLE FOR ENGINE	20-8
STANDARD VALUE TABLE FOR ENGINE FH100-1	20-8
STANDARD VALUE TABLE FOR ENGINE FH120-1	20-11
STANDARD VALUE TABLE FOR ENGINE FH135-1	20-14
STANDARD VALUE TABLE FOR ENGINE: FH160-1	20-17
STANDARD VALUE TABLE FOR MACHINE	20-20
STANDARD VALUE TABLE FOR MACHINE: FH100-1	20-20
STANDARD VALUE TABLE FOR MACHINE: FH120-1	20-27
STANDARD VALUE TABLE FOR MACHINE: FH135-1	20-34
STANDARD VALUE TABLE FOR MACHINE: FH160-1	20-41
30 TESTING AND ADJUSTING	
PRECAUTIONS BEFORE WORK	30-6
LIST OF ABBREVIATIONS	30-7
RELATED INFORMATION ON TESTING AND ADJUSTING	30-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$