

Shop Manual

FORKLIFT TRUCK

FH60-2

FH70-2

FH80-2

SERIAL NUMBERS

FH60-51001

FH70-51001

FH80-51001

and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	
INDEX	00-2
LIST OF ABBREVIATIONS	00-14
FOREWORD, SAFETY AND GENERAL INFORMATION	00-19
HOW TO READ THE SHOP MANUAL	00-19
PRECAUTIONS RELATED TO WORK SAFETY	00-21
FIRE PREVENTION	00-30
IF A FIRE BREAKS OUT	00-32
INSTRUCTIONS FOR WASTE DISPOSAL	00-33
INSTRUCTIONS FOR HANDLING HYDRAULIC COMPONENTS	00-34
INSTRUCTIONS FOR DISCONNECTING AND CONNECTING PIPING	00-36
INSTRUCTIONS FOR HANDLING ELECTRIC COMPONENTS	00-44
INSTRUCTIONS FOR HANDLING FUEL SYSTEM COMPONENTS	00-46
INSTRUCTIONS FOR HANDLING INTAKE SYSTEM COMPONENTS	00-47
USE OF KOMTRAX	00-48
DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER	00-49
INSTRUCTIONS FOR DISCONNECTING AND CONNECTING CONNECTORS	00-53
HOW TO DISCONNECT AND CONNECT DT CONNECTORS	00-58
HOW TO DISCONNECT AND CONNECT SLIDE LOCK TYPE CONNECTORS	00-59
HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE PULLING LOCK	00-61
HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE PRESSING LOCK	00-62
HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE TURNING HOUSING	00-64
HOW TO READ ELECTRIC WIRE CODE	00-65
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-71
STANDARD TIGHTENING TORQUE TABLE	00-73
UNIT CONVERSION TABLE	00-80
01 SPECIFICATION	
LIST OF ABBREVIATIONS	01-3
SPECIFICATIONS	01-8
SPECIFICATION DRAWING	01-8
SPECIFICATIONS	01-14
WEIGHT TABLE	01-26
FUEL, COOLANT, AND LUBRICANT	01-29
10 STRUCTURE AND FUNCTION	
LIST OF ABBREVIATIONS	10-5
STARTING SYSTEM	10-10
STARTING SYSTEM COMPONENT LAYOUT DRAWING	10-10
PREHEATING SYSTEM	10-11
ENGINE SYSTEM	10-14
ENGINE SYSTEM COMPONENT LAYOUT DRAWING	10-14
ENGINE CONTROL SYSTEM	10-15
AUTOMATIC ENGINE STOP SYSTEM	10-17
ENGINE SYSTEM COMPONENTS	10-20
COOLING SYSTEM	10-37
COOLING SYSTEM COMPONENT LAYOUT DRAWING	10-37
CONTROL SYSTEM	10-39
CONTROL SYSTEM COMPONENT LAYOUT DRAWING	10-39
MONITOR PANEL SYSTEM	10-40
KOMTRAX SYSTEM	10-41
SEAT BELT INTERLOCK SYSTEM	10-42
CONTROL SYSTEM COMPONENTS	10-44

HYDRAULIC SYSTEM	10-67
HYDRAULIC SYSTEM COMPONENT LAYOUT DRAWING	10-67
CLSS	10-68
HYDRAULIC SYSTEM COMPONENTS-	10-70
POWER TRAIN SYSTEM	10-100
POWER TRAIN SYSTEM COMPONENT LAYOUT DRAWING	10-100
TRAVEL SPEED LIMIT SYSTEM	10-102
DIRECTIONAL LEVER NEUTRAL ALARM SYSTEM	10-103
TRAVEL INTERLOCK SYSTEM	10-104
POWER TRAIN SYSTEM COMPONENTS-	10-106
WORK EQUIPMENT SYSTEM	10-136
WORK EQUIPMENT SYSTEM COMPONENT LAYOUT DRAWING-	10-136
STRUCTURE OF VALVE CONTROL-	10-137
LIFT INTERLOCK SYSTEM	10-138
WORK EQUIPMENT SYSTEM COMPONENTS	10-140
STEERING SYSTEM	10-146
STEERING SYSTEM COMPONENT LAYOUT DRAWING-	10-146
STEERING COLUMN-	10-147
STEERING SYSTEM COMPONENTS	10-148
BRAKE SYSTEM	10-156
BRAKE SYSTEM COMPONENT LAYOUT DRAWING	10-156
PARKING BRAKE REMINDER SYSTEM-	10-157
PARKING BRAKE DRAGGING PREVENTION SYSTEM	10-159
BRAKE SYSTEM COMPONENTS-	10-161
FRONT BRAKE	10-171
BRAKE COOLING PUMP-	10-174
UNDERCARRIAGE AND FRAME	10-175
STRUCTURE OF FRAME-	10-175
TIRE	10-176
WORK EQUIPMENT-	10-177
STRUCTURE OF WORK EQUIPMENT	10-177
20 STANDARD VALUE TABLE	
LIST OF ABBREVIATIONS	20-3
STANDARD VALUE TABLE FOR ENGINE	20-8
STANDARD VALUE TABLE FOR ENGINE: FH60-2	20-8
STANDARD VALUE TABLE FOR ENGINE: FH70-2	20-10
STANDARD VALUE TABLE FOR ENGINE: FH80-2	20-12
STANDARD VALUE TABLE FOR MACHINE-	20-14
STANDARD VALUE TABLE FOR MACHINE: FH60-2	20-14
STANDARD VALUE TABLE FOR MACHINE: FH70-2	20-18
STANDARD VALUE TABLE FOR MACHINE: FH80-2	20-22
30 TESTING AND ADJUSTING	
LIST OF ABBREVIATIONS	30-4
RELATED INFORMATION ON TESTING AND ADJUSTING	30-9
TOOLS FOR TESTING AND ADJUSTING	30-9
ENGINE AND COOLING SYSTEM	30-14
TESTING ENGINE SPEED	30-14
TESTING EXHAUST GAS COLOR	30-15
TESTING AND ADJUSTING VALVE CLEARANCE	30-17
TESTING COMPRESSION PRESSURE	30-19
TESTING BLOWBY PRESSURE-	30-22
TESTING ENGINE OIL PRESSURE	30-23

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$