

Shop Manual

HYDRAULIC
EXCAVATOR

HB335-1 **HB335LC-1**
HB365-1 **HB365LC-1**

SERIAL NUMBERS 1001 and up

Hybrid

KOMATSU

HYDRAULIC EXCAVATOR

HB335-1
HB335LC-1
HB365-1
HB365LC-1

Model Serial Number

HB335-1	1001 and up
HB335LC-1	1001 and up
HB365-1	1001 and up
HB365LC-1	1001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-15
Important safety notice (Hybrid)	00-15
How to read the shop manual	00-22
Explanation of terms for maintenance standard	00-24
Handling equipment of fuel system devices	00-26
Handling of intake system parts	00-27
Handling of hydraulic equipment	00-28
Method of disconnecting and connecting of push-pull type coupler	00-30
Handling of electrical equipment	00-33
How to read electric wire code (Hybrid)	00-41
Precautions when performing operation	00-46
Practical use of KOMTRAX	00-51
Handling hybrid components and high voltage wiring harness	00-52
Standard tightening torque table	00-55
List of abbreviation	00-61
Conversion table	00-66
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Working range drawings	01-7
Specifications	01-11
Weight table	01-27
Table of fuel, coolant, and lubricants	01-35
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
KVTG	10-5
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-16
EGR cooler	10-18
Cooling system	10-19
Hybrid system	10-21
Outline of hybrid system	10-21
Configuration of hybrid system	10-22
Protective function of hybrid component	10-23
Protection function for workers when disassembling hybrid component	10-25
Cooling system of hybrid component	10-27
Interlock function	10-28
Motor-generator	10-29
Electric swing motor	10-30
Electric control unit	10-32
High voltage wiring harness (power cable)	10-33
Water pump	10-34
Power train	10-35
Power train system	10-35
Swing circle	10-37
Swing machinery with swing brake	10-38
Final drive	10-40
Undercarriage and frame	10-42
Track frame and idler cushion	10-42
Hydraulic system	10-44
Hydraulic component layout	10-44
Valve control	10-46

Hydraulic tank.....	10-47
CLSS.....	10-49
Main pump.....	10-54
Control valve.....	10-86
Travel motor.....	10-141
PPC valve.....	10-157
Solenoid valve.....	10-180
Attachment circuit selector valve.....	10-184
Center swivel joint.....	10-187
Accumulator.....	10-189
Work equipment.....	10-190
Work equipment.....	10-190
Electrical system.....	10-193
Electrical control system.....	10-193
System component parts.....	10-232
Machine monitor system.....	10-247
KOMTRAX system (GPRS type).....	10-270
KOMTRAX system (Orbcomm type).....	10-273
Sensor.....	10-276
20 Standard value tables.....	20-1
Table of contents.....	20-2
Standard service value table.....	20-3
Standard value table for engine.....	20-3
Standard value table for machine.....	20-5
30 Testing and adjusting.....	30-1
Table of contents.....	30-2
Related information on testing and adjusting.....	30-3
Tools for testing and adjusting.....	30-3
Sketch of tools for testing and adjusting.....	30-6
Engine and cooling system.....	30-8
Testing engine speed.....	30-8
Testing boost pressure.....	30-9
Testing exhaust gas color.....	30-12
Testing and adjusting valve clearance.....	30-13
Testing compression pressure.....	30-16
Testing blowby pressure.....	30-24
Testing engine oil pressure.....	30-25
Testing EGR valve and KVGT oil pressures.....	30-26
Testing fuel pressure.....	30-27
Testing fuel discharge, return and leakage.....	30-33
Bleeding air from fuel system.....	30-38
Testing fuel circuit for leakage.....	30-39
Handling cylinder cutout mode operation.....	30-40
Handling no-injection cranking operation.....	30-41
Checking and adjusting air conditioner compressor belt tension.....	30-42
Replacing fan belt.....	30-43
Replacing alternator belt.....	30-44
Hybrid system.....	30-45
Precautions related to hybrid equipment.....	30-45
Bleeding air from hybrid cooling system.....	30-46
Testing water pressure of hybrid coolant.....	30-48
Testing swing parking brake.....	30-50
Cleaning and replacing oil filter of electric swing motor.....	30-51
Testing operation of swing emergency stop switch.....	30-52
Power train.....	30-55
Testing swing circle bearing clearance.....	30-55
Undercarriage and frame.....	30-56
Testing and adjusting track tension.....	30-56
Hydraulic system.....	30-57

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$