

Shop Manual

DUMP TRUCK

HD325-7

HD405-7

SERIAL NUMBERS

HD325- 7001-7025

HD325- 7101 and up

HD405- 3001-3035

HD405- 7101 and up

ecot3

KOMATSU

DUMP TRUCK

HD325-7

HD405-7

Machine model	Serial number
---------------	---------------

HD325-7	7001 – 7025
HD325-7	7101 and up
HD405-7	3001 – 3035
HD405-7	7101 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00486-22
00 Index and foreword	SEN00743-22
Index	SEN00744-22
Foreword and general information	SEN00745-06
01 Specification	SEN00746-05
Specification and technical data	SEN00747-05
10 Structure, function and maintenance standard	SEN00748-14
Engine and cooling system	SEN00749-02
Power train, Part 1	SEN00750-03
Power train, Part 2	SEN00853-02
Steering system	SEN00751-03
Brake system	SEN00752-05
Undercarriage and frame	SEN00753-04
Hydraulic system	SEN00754-04
Cab and its attachments	SEN00755-03
Electrical system, Part 1	SEN00756-04
Electrical system, Part 2	SEN00757-06
Electrical system, Part 3	SEN00863-04
Electrical system, Part 4	SEN00873-03
20 Standard value table	SEN00758-05
Standard service value table	SEN01181-05
30 Testing and adjusting	SEN00759-12
Testing and adjusting, Part 1	SEN01182-09
Testing and adjusting, Part 2	SEN01183-09
Testing and adjusting, Part 3	SEN01184-06
Testing and adjusting, Part 4	SEN02401-03
40 Troubleshooting	SEN00760-06
General information on troubleshooting	SEN01185-04
Troubleshooting by failure code, General	SEN01186-03
Troubleshooting by failure code, Part 1	SEN01187-03
Troubleshooting by failure code, Part 2	SEN01188-04
Troubleshooting by failure code, Part 3	SEN01189-04
Troubleshooting by failure code, Part 4	SEN01190-03
Troubleshooting by failure code, Part 5	SEN01191-03
Troubleshooting of electrical system (E-mode)	SEN01192-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01193-01
Troubleshooting of mechanical system (S-mode)	SEN01194-02

50 Disassembly and assembly	SEN00761-07
General information on disassembly and assembly	SEN01954-06
Engine and cooling system	SEN01955-04
Power train, Part 1	SEN01956-04
Power train, Part 2	SEN01957-05
Steering system	SEN01958-02
Brake system	SEN01959-05
Undercarriage and frame	SEN01960-04
Hydraulic system	SEN01961-02
Body	SEN01962-02
Cab and its attachments	SEN01963-03
Electrical system	SEN01964-02
90 Diagrams and drawings	SEN00762-09
Hydraulic diagrams and drawings	SEN00763-04
Electrical diagrams and drawings	SEN00764-07

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$