

# Shop Manual

ARTICULATED  
DUMP TRUCK

**HM300-2R**

SERIAL NUMBERS 7001 and up

**KOMATSU**



---

# ARTICULATED DUMP TRUCK

## HM300-2R

**Machine model      Serial number**

HM300-2R              7001 and up

---

## 00 Index and foreword

### Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02269-08
00 Index and foreword	SEN02270-08
Index	SEN02271-08 ●
Foreword and general information	SEN02272-02
01 Specification	SEN02273-00
Specification and technical data	SEN02274-00
10 Structure, function and maintenance standard	SEN02275-01
Engine and cooling system	SEN02664-00
Power train, Part 1	SEN02665-00
Power train, Part 2	SEN02666-00
Steering system	SEN02667-00
Brake system	SEN02668-00
Undercarriage and frame	SEN02669-00
Hydraulic system	SEN02670-00
Cab and its attachments	SEN02671-00
Electrical system, Part 1	SEN02672-00
Electrical system, Part 2	SEN02673-00
Electrical system, Part 3	SEN04842-00
Electrical system, Part 4	SEN02674-01
20 Standard value table	SEN02276-01
Standard service value table	SEN03418-01
30 Testing and adjusting	SEN02277-04
Testing and adjusting, Part 1	SEN03419-03 ●
Testing and adjusting, Part 2	SEN03420-03 ●
Testing and adjusting, Part 3	SEN03421-02 ●
40 Troubleshooting	SEN02278-04
Failure code table and fuse locations	SEN03422-00
General information on troubleshooting	SEN03423-02
Troubleshooting by failure code (Display of code), Part 1	SEN03424-00
Troubleshooting by failure code (Display of code), Part 2	SEN03425-01

---

Troubleshooting by failure code (Display of code), Part 3	SEN03426-02 ●
Troubleshooting by failure code (Display of code), Part 4	SEN03427-02
Troubleshooting by failure code (Display of code), Part 5	SEN03428-01
Troubleshooting of electrical system (E-mode)	SEN03429-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03430-00
Troubleshooting of engine (S-mode)	SEN03431-01
50 Disassembly and assembly	SEN02279-03
General information on disassembly and assembly	SEN04028-01
Engine and cooling system (SAA6D125E-5)	SEN04029-01
Power train, Part 1	SEN04031-01 ●
Power train, Part 2	SEN04032-00
Power train, Part 3	SEN04033-00
Power train, Part 4	SEN04034-01 ●
Power train, Part 5	SEN04035-01 ●
Undercarriage and frame	SEN04036-01
Hydraulic system	SEN04037-00
Body	SEN04038-01
Cab and its attachments	SEN04039-01 ●
Electrical system	SEN04040-00
90 Diagrams and drawings	SEN02280-05
Hydraulic diagrams and drawings	SEN02281-00
Electrical diagrams and drawings	SEN02282-05

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$