

Shop Manual

HYDRAULIC
EXCAVATOR

PC120-8

SERIAL NUMBERS 80001 and up

★ Arm crane cannot be used on this machine.

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC120-8

Machine model Serial number

PC120-8 80001 and up

00 Index and foreword

Index

Table of contents

00 Index and foreword

Index	00-2
Table of contents	00-2
Foreword and general information	00-9
Safety notice.....	00-9
How to read the shop manual.....	00-14
Explanation of terms for maintenance standard	00-16
Handling of electric equipment and hydraulic component.....	00-18
Handling of connectors newly used for engines	00-27
How to read electric wire code	00-30
Precautions when carrying out operation	00-33
Method of disassembling and connecting push-pull type coupler	00-36
Standard tightening torque table	00-39
Conversion table.....	00-43

01 Specification

Specification and technical data.....	01-3
Specification dimension drawings	01-3
Working range diagram	01-4
Specifications	01-5
List of weights.....	01-8
List of lubricant and coolant to be filled	01-10

10 Structure, function and maintenance standard

Engine and cooling system	10-4
Engine mount	10-4
PTO	10-5
Cooling system.....	10-6
Power train	10-8
Power train	10-8
Swing circle	10-9
Swing machinery	10-10
Undercarriage and frame	10-12
Track frame	10-12
Idler cushion	10-13
Idler.....	10-14
Track roller.....	10-15
Carrier roller.....	10-16
Sprocket	10-17
Track shoe.....	10-18
Hydraulic system.....	10-22
Hydraulic equipment layout drawing.....	10-22
Valve control	10-24
Hydraulic tank and filter	10-26
Hydraulic pump.....	10-28
Control valve.....	10-56
CLSS	10-66
Functions and operation by valve.....	10-70
PPC valve.....	10-100
Swing motor.....	10-115
Travel motor	10-123

Center swivel joint	10-132
Solenoid valve	10-134
Accumulator	10-138
Holding valve	10-140
Hydraulic cylinder	10-146
Work equipment.....	10-148
Work equipment	10-148
Dimensions of components	10-150
Cab and its attachments	10-154
Air conditioner	10-154
Electrical system.....	10-156
Electronic control system	10-156
Machine monitor system	10-188
KOMTRAX system	10-201
Sensor	10-203
20 Standard value table	
Standard service value table.....	20-3
Standard value table for engine related parts	20-3
Standard value table for chassis related parts	20-4
30 Testing and adjusting	
Related information on testing and adjusting.....	30-3
Tools for testing, adjusting, and troubleshooting.....	30-3
Sketches of special tools.....	30-8
Engine and cooling system	30-9
Testing engine speed	30-9
Testing exhaust temperature.....	30-10
Checking exhaust gas color	30-11
Adjusting valve clearance.....	30-12
Testing compression pressure	30-14
Testing blow-by pressure	30-16
Testing engine oil pressure	30-17
Reduced cylinder mode operation.....	30-18
No-injection cranking	30-18
Handling fuel system parts	30-19
Releasing residual pressure from fuel system	30-19
Testing fuel pressure	30-20
Testing fuel return rate and fuel leakage	30-21
Bleeding air from fuel circuit	30-23
Checking fuel circuit for leakage	30-24
Testing and adjusting alternator belt tension.....	30-25
Checking and adjusting air conditioner compressor belt tension	30-26
Power train	30-27
Testing swing circle bearing clearance	30-27
Undercarriage and frame	30-28
Checking and adjusting track shoe tension.....	30-28
Hydraulic system.....	30-30
Testing and adjusting oil pressure in work equipment, swing, and travel circuits	30-30
Testing control circuit basic pressure	30-33
Testing and adjusting oil pressure in pump PC control circuit.....	30-34
Testing and adjusting oil pressure in pump LS control circuit	30-37
Testing solenoid valve output pressure.....	30-40
Testing PPC valve output pressure	30-44
Adjusting play of work equipment and swing PPC valves	30-45

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$