

Shop Manual

HYDRAULIC
EXCAVATOR

PC130-10MO

SERIAL NUMBERS 70413 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-14
How to Read the Shop Manual	00-14
Safety Notice for Operation	00-16
Precautions to Prevent Fire	00-24
Procedures If Fire Occurs	00-25
Precautions When You Dispose of Waste Materials	00-26
Precautions When You Handle Hydraulic Equipment	00-27
Precautions When You Disconnect and Connect Pipings	00-30
Precautions When You Handle Electrical Equipment	00-37
Precautions When You Handle Fuel System Equipment	00-39
Precautions When You Handle Intake System Equipment	00-40
Practical Use of KOMTRAX	00-41
Disconnect and Connect Push-Pull Type Coupler	00-42
Precautions for Disconnection and Connection of Connectors	00-46
How to Disconnect and Connect Deutsch Connector	00-50
How to Disconnect and Connect Slide Lock Type Connector	00-51
How to Disconnect and Connect Connector with Lock to Pull	00-53
How to Disconnect and Connect Connector with Lock to Push	00-54
How to Disconnect and Connect Connector with Housing to Rotate	00-56
How to Read the Codes for Electric Cable	00-57
Explanation of Terms for Maintenance Standard	00-61
Standard Tightening Torque Table	00-64
Conversion Table	00-71
Abbreviation List	00-76
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-10
Fuel, Coolant, Lubricant	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-5
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-5
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-6
System Operating Lamp System	10-7
Battery Disconnect Switch	10-10
Engine System	10-11
Layout Drawing of Engine System	10-11
Engine Control System	10-12
Auto-Deceleration System	10-16
Engine Automatic Warm-up System	10-18
Overheat Prevention System	10-20
Turbocharger Protection System	10-22
Component Parts of Engine System	10-23
Cooling System	10-24
Layout Drawing of Cooling System	10-24
Control System	10-26
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-26
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-28
Machine Monitor System	10-30
KOMTRAX System	10-33
Component Parts of Control System	10-35

Hydraulic System	10-69
Layout Drawing of Hydraulic System.....	10-69
CLSS	10-71
Engine and Pump Combined Control System	10-74
Component Parts of Hydraulic System.....	10-80
Work Equipment System.....	10-167
Layout Drawing of Work Equipment System.....	10-167
Structure of Valve Control	10-170
PPC Lock System	10-171
One-Touch Power Maximizing System.....	10-172
Attachment Oil Flow Adjuster System	10-173
Component Parts of Work Equipment System	10-175
Swing System	10-195
Layout Drawing of Swing System.....	10-195
Swing Control System Diagram	10-197
Component Parts of Swing System.....	10-200
Travel System	10-211
Layout Drawing of Travel System.....	10-211
System Diagram of Travel Control System.....	10-213
Component Parts of Travel System.....	10-217
Undercarriage and Frame	10-234
Layout Drawing of Undercarriage.....	10-234
Idler Cushion.....	10-235
Work Equipment	10-236
Structure of Work Equipment	10-236
Function of Work Equipment	10-237
Work Equipment Clearance Adjustment Shim.....	10-238
Bucket Clearance Adjustment Shim	10-239
CAB Related Parts	10-240
ROPS CAB	10-240
CAB Mount	10-242
CAB Tipping Stopper	10-244
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC130-10M0	20-3
Standard Value Table for Machine.....	20-6
Standard Value Table for Machine: PC130-10M0	20-6
Machine Posture and Procedures to Measure Performance	20-20
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Related Information on Testing and Adjusting	30-6
Tools for Testing and Adjusting.....	30-6
Sketch of Tools for Testing and Adjusting	30-10
Engine and Cooling System	30-12
Examine Engine Speed.....	30-12
Examine Exhaust Gas Color	30-14
Examine and Adjust Valve Clearance.....	30-16
Examine Compression Pressure	30-19
Examine Blowby Pressure	30-21
Examine Engine Oil Pressure	30-23
Examine Fuel Pressure.....	30-25
Examine Fuel Return Rate and Leakage.....	30-26
Bleed Air from Fuel System.....	30-31
Examine Fuel Circuit for Leakage	30-33
Handle Cylinder Cut-out Mode Operation.....	30-35
Handle No-Injection Cranking Operation	30-36

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$