

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC138USLC-10***

SERIAL NUMBERS 40001 and up

**KOMATSU**



SHOP MANUAL

# HYDRAULIC EXCAVATOR

## PC138USLC-10

Model                      Serial Number

PC138USLC-    40001 and up  
10

---

# 00 Index and foreword

---

---

## Index

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-13
Important safety notice .....	00-13
How to read the shop manual .....	00-20
Explanation of terms for maintenance standard .....	00-22
Handling equipment of fuel system devices .....	00-24
Handling of intake system parts .....	00-25
Handling of hydraulic equipment .....	00-26
Method of disconnecting and connecting of push-pull type coupler .....	00-28
Handling of electrical equipment .....	00-31
How to read electric wire code .....	00-39
Precautions when performing operation .....	00-42
Practical use of KOMTRAX .....	00-47
Standard tightening torque table .....	00-48
List of abbreviation .....	00-54
Conversion table .....	00-59
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Working range drawings .....	01-4
Specifications .....	01-5
Weight table .....	01-9
Table of fuel, coolant, and lubricants .....	01-11
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-3
Engine related parts .....	10-3
PTO .....	10-5
Variable flow turbocharger .....	10-6
EGR system piping drawing .....	10-10
EGR system circuit diagram .....	10-12
EGR valve .....	10-13
EGR cooler .....	10-15
KCCV layout drawing .....	10-17
KCCV ventilator .....	10-19
KDOC muffler .....	10-21
Cooling system .....	10-23
Power train .....	10-25
Power train system .....	10-25
Swing circle .....	10-27
Swing machinery .....	10-28
Undercarriage and frame .....	10-30
Track frame .....	10-30
Idler cushion .....	10-31
Hydraulic system .....	10-32
Hydraulic component layout .....	10-32
Valve control .....	10-34
Hydraulic tank .....	10-35
CLSS .....	10-37
Main pump .....	10-41
Control valve .....	10-68
Swing motor .....	10-113
Travel motor .....	10-125
Work equipment and swing PPC valve .....	10-136
Travel PPC valve .....	10-143
Blade PPC valve .....	10-149
1st-line attachment PPC valve (with EPC valve) .....	10-151

Solenoid valve .....	10-159
Attachment circuit selector valve (for low pressure circuit).....	10-165
Attachment circuit selector valve (for high pressure circuit) .....	10-168
Multi-control valve .....	10-170
Anti-drop valve for boom.....	10-171
Anti-drop valve for arm .....	10-175
Center swivel joint.....	10-179
PPC circuit accumulator .....	10-181
Attachment circuit accumulator (for low pressure circuit).....	10-182
Attachment circuit accumulator (for high pressure circuit) .....	10-183
Work equipment .....	10-184
Work equipment.....	10-184
Work equipment shim.....	10-185
Bucket play adjustment shim.....	10-186
Cab and its attachments.....	10-187
Cab mount and cab tipping stopper .....	10-187
ROPS cab.....	10-188
Electrical system .....	10-190
Electrical control system .....	10-190
Machine monitor system.....	10-222
KOMTRAX system.....	10-243
Sensor .....	10-260
20 Standard value tables.....	20-1
Table of contents .....	20-2
Standard service value table.....	20-3
Standard value table for engine .....	20-3
Standard value table for machine .....	20-4
Standard value table for electrical system.....	20-17
30 Testing and adjusting .....	30-1
Table of contents .....	30-2
Related information on testing and adjusting .....	30-3
Tools for testing and adjusting .....	30-3
Sketch of tools for testing and adjusting .....	30-6
Engine and cooling system.....	30-8
Testing engine speed .....	30-8
Testing exhaust gas color .....	30-9
Testing and adjusting valve clearance.....	30-10
Testing compression pressure.....	30-12
Testing blowby pressure .....	30-15
Testing engine oil pressure .....	30-16
Visual check inside of EGR valve .....	30-16-1
Clean inside of EGR valve .....	30-16-2
Testing fuel pressure .....	30-17
Testing fuel return rate and leakage .....	30-18
Bleeding air from fuel system .....	30-21
Testing fuel circuit for leakage .....	30-23
Handling cylinder cutout mode operation.....	30-24
Handling no-injection cranking operation.....	30-25
Testing and adjusting air conditioner compressor belt tension .....	30-26
Check fan belt, replace.....	30-27
Check auto-tensioner, replace.....	30-29
Writing compensation values at replacement of injector and engine controller .....	30-32
Power train.....	30-36
Testing swing circle bearing clearance .....	30-36
Undercarriage and frame.....	30-37
Testing and adjusting track tension .....	30-37
Hydraulic system .....	30-38
Releasing remaining pressure from hydraulic circuit.....	30-38
Testing and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-43
Testing oil pressure of control circuit .....	30-46

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$