#### **Shop Manual**

HYDRAULIC EXCAVATOR

PC160LC-8

SERIAL NUMBERS 25001 and up

ecot3



# HYDRAULIC EXCAVATOR PC160LC-8

Machine model Serial number

PC160LC-8 25001 and up

## **00 Index and foreword** 100 Index

Composition of shop manual	2
Composition of shop manual	. ~
Table of contents	4

#### **Composition of shop manual**

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04566-16
00 Index and foreword	SEN04567-16
100 Index	SEN04568-16
200 Foreword and general information	SEN04569-02
01 Specification	SEN04570-00
100 Specification and technical data	SEN04571-00
10 Structure, function and maintenance standard	SEN04572-03
100 Engine and cooling system	SEN04573-00
200 Power train system	SEN04574-00
300 Undercarriage and frame	SEN04575-01
401 Hydraulic system, Part 1	SEN04576-00
402 Hydraulic system, Part 2	SEN04577-00
403 Hydraulic system, Part 3	SEN04578-02
500 Work equipment	SEN04579-00
600 Cab and its attachments	SEN04580-00
700 Electrical system	SEN04581-00
20 Standard value table	SEN04582-00
100 Standard service value table	SEN04790-00
30 Testing and adjusting	SEN04583-05
101 Testing and adjusting, Part 1	SEN04791-04
102 Testing and adjusting, Part 2	SEN04792-02
103 Testing and adjusting, Part 3	SEN04793-00
40 Troubleshooting	SEN04584-02
100 Failure code table and fuse locations	SEN04794-01
200 General information on troubleshooting	SEN04795-01
301 Troubleshooting by failure code, Part 1	SEN04796-00
302 Troubleshooting by failure code, Part 2	SEN04797-02
303 Troubleshooting by failure code, Part 3	SEN04798-00
304 Troubleshooting by failure code, Part 4	SEN04799-00
400 Troubleshooting of electrical system (E-mode)	SEN04800-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04801-00
600 Troubleshooting of engine (S-mode)	SEN04802-00
50 Disassembly and assembly	SEN04585-08
100 General information on disassembly and assembly	SEN04758-03
200 Engine and cooling system	SEN04759-04
300 Power train	SEN04760-02
400 Undercarriage and frame	SEN04761-03

00-100 **2** PC160LC-8

500 Hydraulic system	SEN04762-00
600 Work equipment	SEN04763-01
700 Cab and its attachments	SEN04764-01
800 Electrical system	SEN04765-00
90 Diagrams and drawings	SEN04586-03
100 Hydraulic diagrams and drawings	SEN04587-01
200 Electrical diagrams and drawings	SEN04588-02

PC160LC-8 00-100 **3** 

It's a preview. You can download the full file by clicking the link below.

### https://shopservicemanual.com/

Service Manuals from 2\$