

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC160LC-8**

SERIAL NUMBERS C20€€F and up

**ecot3**

**KOMATSU**



---

# HYDRAULIC EXCAVATOR

## PC160LC-8

**Machine model      Serial number**

PC160LC-8              C20001 and up

---

## 00 Index and foreword

### 100 Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04566-14TH
00 Index and foreword	SEN04567-14
100 Index	SEN04568-14 ●
200 Foreword and general information	SEN04569-01
01 Specification	SEN04570-00
100 Specification and technical data	SEN04571-00
10 Structure, function and maintenance standard	SEN04572-03
100 Engine and cooling system	SEN04573-00
200 Power train system	SEN04574-00
300 Undercarriage and frame	SEN04575-01
401 Hydraulic system, Part 1	SEN04576-00
402 Hydraulic system, Part 2	SEN04577-00
403 Hydraulic system, Part 3	SEN04578-02
500 Work equipment	SEN04579-00
600 Cab and its attachments	SEN04580-00
700 Electrical system	SEN04581-00
20 Standard value table	SEN04582-00
100 Standard service value table	SEN04790-00
30 Testing and adjusting	SEN04583-05
101 Testing and adjusting, Part 1	SEN04791-04 ●
102 Testing and adjusting, Part 2	SEN04792-02
103 Testing and adjusting, Part 3	SEN04793-00
40 Troubleshooting	SEN04584-02
100 Failure code table and fuse locations	SEN04794-01
200 General information on troubleshooting	SEN04795-01
301 Troubleshooting by failure code, Part 1	SEN04796-00
302 Troubleshooting by failure code, Part 2	SEN04797-02
303 Troubleshooting by failure code, Part 3	SEN04798-00
304 Troubleshooting by failure code, Part 4	SEN04799-00
400 Troubleshooting of electrical system (E-mode)	SEN04800-01

---

500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04801-00
600 Troubleshooting of engine (S-mode)	SEN04802-00
50 Disassembly and assembly	SEN04585-07
100 General information on disassembly and assembly	SEN04758-03 ●
200 Engine and cooling system	SEN04759-04
300 Power train	SEN04760-02 ●
400 Undercarriage and frame	SEN04761-03
500 Hydraulic system	SEN04762-00
600 Work equipment	SEN04763-01
700 Cab and its attachments	SEN04764-00
800 Electrical system	SEN04765-00
90 Diagrams and drawings	SEN04586-03
100 Hydraulic diagrams and drawings	SEN04587-01
200 Electrical diagrams and drawings	SEN04588-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$