

Shop Manual

HYDRAULIC
EXCAVATOR

PC200-10M0

SERIAL NUMBERS 700001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-14
Foreword, Safety, Basic Information	00-17
How to Read the Shop Manual	00-17
Safety Notice for Operation	00-19
Precautions to Prevent Fire	00-27
Procedures If Fire Occurs	00-28
Precautions When You Dispose of Waste Materials	00-29
Precautions When You Handle Hydraulic Equipment	00-30
Precautions When You Disconnect and Connect Pipings	00-33
Precautions When You Handle Electrical Equipment	00-40
Precautions When You Handle Fuel System Equipment	00-42
Precautions When You Handle Intake System Equipment	00-43
Practical Use of KOMTRAX	00-44
Disconnect and Connect Push-Pull Type Coupler	00-45
Precautions for Disconnection and Connection of Connectors	00-49
How to Disconnect and Connect Deutsch Connector	00-53
How to Disconnect and Connect Slide Lock Type Connector	00-54
How to Disconnect and Connect Connector with Lock to Pull	00-56
How to Disconnect and Connect Connector with Lock to Push	00-57
How to Disconnect and Connect Connector with Housing to Rotate	00-59
How to Read the Codes for Electric Cable	00-60
Explanation of Terms for Maintenance Standard	00-64
Standard Tightening Torque Table	00-67
Conversion Table	00-74
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-7
Weight Table	01-10
Fuel, Coolant and Lubricant to Meet Ambient Temperature	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-5
Layout Drawing of Boot-up System	10-5
System Operating Lamp System	10-6
Battery Disconnect Switch	10-7
Engine System	10-8
Layout Drawing of Engine System	10-8
Engine Control System	10-9
Auto-Deceleration System	10-11
Engine Automatic Warm-up System	10-13
Overheat Prevention System	10-15
Turbocharger Protection System	10-18
Cooling System	10-19
Layout Drawing of Cooling System	10-19
Control System	10-21
Layout Drawing of Control System	10-21
Machine Monitor System	10-23
KOMTRAX System	10-25
Component Parts of Control System	10-26
Hydraulic System	10-50
Layout Drawing of Hydraulic System	10-50
CLSS	10-53

Engine and Pump Combined Control System	10-72
Pump and Valve Control System.....	10-77
Component Parts of Hydraulic System.....	10-80
Work Equipment System.....	10-146
Layout Drawing of Work Equipment System	10-146
One-Touch Power Maximizing System	10-150
PPC Lock System	10-152
Attachment Oil Flow Adjuster System	10-154
Component Parts of Work Equipment System	10-156
Swing System	10-177
Layout Drawing of Swing System.....	10-177
Swing Control System Diagram	10-179
Component Parts of Swing System.....	10-183
Travel System	10-193
Layout Drawing of Travel System.....	10-193
System Diagram of Travel Control System.....	10-195
Function of Travel Control System	10-196
Component Parts of Travel System.....	10-197
Function of Swing Circle	10-216
Undercarriage and Frame	10-217
Layout Drawing of Undercarriage.....	10-217
Work Equipment	10-219
Structure of Work Equipment	10-219
Work Equipment Clearance Adjustment Shim.....	10-220
Bucket Clearance Adjustment Shim	10-221
CAB Related Parts.....	10-222
ROPS CAB	10-222
CAB Mount	10-223
CAB Tipping Stopper	10-225
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC200-10M0	20-3
Standard Value Table for Machine: PC200-10M0.....	20-7
Machine Posture and Procedures to Measure Performance	20-20
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Related Information on Testing and Adjusting	30-6
Tools for Testing and Adjusting.....	30-6
Sketch of Tools for Testing and Adjusting	30-11
Engine and Cooling System	30-13
Examine Engine Speed.....	30-13
Examine Boost Pressure.....	30-16
Examine Exhaust Gas Color	30-19
Examine and Adjust Valve Clearance.....	30-22
Examine Compression Pressure	30-25
Examine Blowby Pressure	30-28
Examine Engine Oil Pressure	30-31
Examine Fuel Pressure.....	30-33
Examine Fuel Discharge, Return and Leakage	30-39
Bleed Air from Fuel System.....	30-44
Examine Fuel Circuit for Leakage	30-46
Handle Cylinder Cut-out Mode Operation.....	30-48
Handle No-Injection Cranking Operation	30-49
Examine and Adjust Air Conditioner Compressor Belt Tension	30-50
Power Train.....	30-52
Examine Swing Circle Bearing Clearance	30-52

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$