

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC210 -10M0**

**PC210LC-10M0**

SERIAL NUMBERS

PC210- 600001  
PC210LC- 600001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-14
Foreword, Safety, Basic Information .....	00-17
How to Read the Shop Manual .....	00-17
Safety Notice for Operation .....	00-19
Precautions to Prevent Fire .....	00-27
Procedures If Fire Occurs .....	00-28
Precautions When You Dispose of Waste Materials .....	00-29
Precautions When You Handle Hydraulic Equipment .....	00-30
Precautions When You Disconnect and Connect Pipings .....	00-33
Precautions When You Handle Electrical Equipment .....	00-40
Precautions When You Handle Fuel System Equipment .....	00-42
Precautions When You Handle Intake System Equipment .....	00-43
Practical Use of KOMTRAX .....	00-44
Disconnect and Connect Push-Pull Type Coupler .....	00-45
Precautions for Disconnection and Connection of Connectors .....	00-49
How to Disconnect and Connect Deutsch Connector .....	00-53
How to Disconnect and Connect Slide Lock Type Connector .....	00-54
How to Disconnect and Connect Connector with Lock to Pull .....	00-56
How to Disconnect and Connect Connector with Lock to Push .....	00-57
How to Disconnect and Connect Connector with Housing to Rotate .....	00-59
How to Read the Codes for Electric Cable .....	00-60
Explanation of Terms for Maintenance Standard .....	00-64
Standard Tightening Torque Table .....	00-67
Conversion Table .....	00-74
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-9
Weight Table .....	01-15
Fuel, Coolant and Lubricant to Meet Ambient Temperature .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-5
Layout Drawing of Boot-up System .....	10-5
System Operating Lamp System .....	10-6
Battery Disconnect Switch .....	10-7
Engine System .....	10-8
Layout Drawing of Engine System .....	10-8
Engine Control System .....	10-9
Auto-Deceleration System .....	10-11
Engine Automatic Warm-up System .....	10-13
Overheat Prevention System .....	10-15
Turbocharger Protection System .....	10-18
Cooling System .....	10-19
Layout Drawing of Cooling System .....	10-19
Control System .....	10-21
Layout Drawing of Control System .....	10-21
Machine Monitor System .....	10-23
KOMTRAX System .....	10-25
Component Parts of Control System .....	10-26
Hydraulic System .....	10-50
Layout Drawing of Hydraulic System .....	10-50
CLSS .....	10-53

Engine and Pump Combined Control System .....	10-72
Pump and Valve Control System.....	10-77
Component Parts of Hydraulic System.....	10-80
Work Equipment System.....	10-148
Layout Drawing of Work Equipment System .....	10-148
One-Touch Power Maximizing System .....	10-152
PPC Lock System .....	10-154
Attachment Oil Flow Adjuster System .....	10-156
Component Parts of Work Equipment System .....	10-158
Swing System .....	10-179
Layout Drawing of Swing System.....	10-179
Swing Control System Diagram .....	10-181
Component Parts of Swing System.....	10-185
Travel System .....	10-197
Layout Drawing of Travel System.....	10-197
System Diagram of Travel Control System.....	10-199
Function of Travel Control System .....	10-200
Component Parts of Travel System.....	10-201
Function of Swing Circle .....	10-220
Undercarriage and Frame .....	10-221
Layout Drawing of Undercarriage.....	10-221
Work Equipment .....	10-223
Structure of Work Equipment .....	10-223
Work Equipment Clearance Adjustment Shim.....	10-224
Bucket Clearance Adjustment Shim .....	10-225
CAB Related Parts.....	10-226
ROPS CAB .....	10-226
CAB Mount .....	10-227
CAB Tipping Stopper .....	10-229
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC210-10M0 .....	20-3
Standard Value Table for Engine: PC210LC-10M0.....	20-7
Standard Value Table for Machine: PC210-10M0.....	20-11
Standard Value Table for Machine: PC210LC-10M0 .....	20-25
Machine Posture and Procedures to Measure Performance .....	20-39
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Related Information on Testing and Adjusting .....	30-6
Tools for Testing and Adjusting.....	30-6
Sketch of Tools for Testing and Adjusting .....	30-11
Engine and Cooling System .....	30-13
Examine Engine Speed.....	30-13
Examine Boost Pressure.....	30-16
Examine Exhaust Gas Color .....	30-19
Examine Mass Air Flow and Temperature Sensor.....	30-22
Examine and Adjust Valve Clearance.....	30-24
Examine Compression Pressure .....	30-27
Examine Blowby Pressure .....	30-30
Examine Engine Oil Pressure .....	30-33
Examine Fuel Pressure .....	30-35
Examine Fuel Discharge, Return and Leakage .....	30-42
Bleed Air from Fuel System.....	30-48
Examine Fuel Circuit for Leakage .....	30-50
Handle Cylinder Cut-out Mode Operation.....	30-52
Handle No-Injection Cranking Operation .....	30-53

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$