

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC210 -10MO**  
**PC210LC-10MO**

SERIAL NUMBERS N730475 and up

VOLUME 1 OF 3

**KOMATSU**

---

## **00 INDEX AND FOREWORD**

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-14
FOREWORD, SAFETY, BASIC INFORMATION .....	00-19
HOW TO READ THE SHOP MANUAL.....	00-19
SAFETY NOTICE FOR OPERATION.....	00-21
PRECAUTIONS TO PREVENT FIRE.....	00-29
ACTIONS IF FIRE OCCURS .....	00-30
PRECAUTIONS WHEN YOU DISPOSE OF WASTE MATERIALS .....	00-31
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-32
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS .....	00-35
PRECAUTIONS WHEN YOU HANDLE ELECTRICAL EQUIPMENT.....	00-42
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-44
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-45
PRACTICAL USE OF KOMTRAX .....	00-46
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-47
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-51
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-55
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-56
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-59
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-61
HOW TO READ ELECTRICAL WIRE CODE .....	00-62
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-66
STANDARD TIGHTENING TORQUE TABLE.....	00-69
CONVERSION TABLE .....	00-76
01 SPECIFICATION.....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATION.....	01-8
SPECIFICATION DRAWING.....	01-8
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATION.....	01-14
WEIGHT TABLE .....	01-20
FUEL, COOLANT AND LUBRICANT TO MEET AMBIENT TEMPERATURE .....	01-23
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-5
BOOT-UP SYSTEM .....	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-10
SYSTEM OPERATING LAMP SYSTEM .....	10-11
BATTERY DISCONNECT SWITCH .....	10-12
ENGINE SYSTEM .....	10-13
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-13
ENGINE CONTROL SYSTEM .....	10-14
AUTO-DECELERATION SYSTEM .....	10-16
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-18
OVERHEAT PREVENTION SYSTEM .....	10-20
TURBOCHARGER PROTECTION SYSTEM .....	10-23
COOLING SYSTEM.....	10-24
LAYOUT DRAWING OF COOLING SYSTEM .....	10-24
CONTROL SYSTEM.....	10-26
LAYOUT DRAWING OF CONTROL SYSTEM PARTS.....	10-26
MACHINE MONITOR SYSTEM .....	10-28
KOMTRAX SYSTEM.....	10-30
CONTROL SYSTEM .....	10-31

HYDRAULIC SYSTEM.....	10-55
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-55
CLSS .....	10-58
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-77
PUMP AND VALVE CONTROL SYSTEM .....	10-82
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-85
WORK EQUIPMENT SYSTEM .....	10-153
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-153
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-157
PPC LOCK SYSTEM .....	10-159
ATTACHMENT OIL FLOW ADJUSTER SYSTEM.....	10-161
WORK EQUIPMENT SYSTEM .....	10-163
SWING SYSTEM .....	10-186
LAYOUT DRAWING OF SWING SYSTEM .....	10-186
SWING CONTROL SYSTEM DIAGRAM .....	10-188
SWING SYSTEM .....	10-192
TRAVEL SYSTEM.....	10-204
LAYOUT DRAWING OF TRAVEL SYSTEM .....	10-204
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-206
FUNCTION OF TRAVEL CONTROL SYSTEM .....	10-207
TRAVEL SYSTEM.....	10-208
FUNCTION OF SWING CIRCLE.....	10-227
UNDERCARRIAGE AND FRAME.....	10-228
LAYOUT DRAWING OF UNDERCARRIAG .....	10-228
WORK EQUIPMENT.....	10-230
STRUCTURE OF WORK EQUIPMENT .....	10-230
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-231
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-232
CAB RELATED PARTS.....	10-233
CAB .....	10-233
CAB MOUNT .....	10-234
CAB TIPPING STOPPER .....	10-236
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-8
STANDARD VALUE TABLE FOR ENGINE: PC210-10M0 .....	20-8
STANDARD VALUE TABLE FOR MACHINE: PC210-10M0.....	20-12
STANDARD VALUE TABLE FOR ENGINE: PC210LC-10M0.....	20-26
STANDARD VALUE TABLE FOR MACHINE: PC210LC-10M0 .....	20-30
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE .....	20-44
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-10
TOOLS FOR TESTING AND ADJUSTING.....	30-10
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-15
ENGINE AND COOLING SYSTEM.....	30-17
TEST ENGINE SPEED .....	30-17
Test boost pressure.....	30-20
TEST EXHAUST GAS COLOR.....	30-23
Test and adjust valve clearance .....	30-26
TEST COMPRESSION PRESSURE.....	30-29
TEST BLOWBY PRESSURE .....	30-32
TEST ENGINE OIL PRESSURE .....	30-35
Test fuel pressure.....	30-37
Test fuel discharged volume, return rate, and leakage .....	30-44
BLEED AIR FROM FUEL SYSTEM .....	30-50

Test fuel system for leakage .....	30-52
CYLINDER CUT-OUT MODE OPERATION .....	30-54
NO-INJECTION CRANKING OPERATION .....	30-55
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION .....	30-56
POWER TRAIN .....	30-58
Test swing circle bearing clearance .....	30-58
UNDERCARRIAGE AND FRAME .....	30-59
Test and adjust track shoe tension .....	30-59
HYDRAULIC SYSTEM .....	30-61
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM .....	30-61
Test and adjust oil pressure in work equipment, swing, and travel circuits .....	30-64
TEST OIL PRESSURE OF CONTROL CIRCUIT .....	30-74
Test and adjust oil pressure in pump PC control circuit .....	30-76
Test and adjust oil pressure in pump LS control circuit .....	30-80
Test outlet pressure of solenoid valve .....	30-88
Test PPC valve outlet pressure .....	30-92
Adjust play of work equipment and swing PPC valve .....	30-95
Test pump swash plate sensor .....	30-96
Test parts causing hydraulic drift in work equipment .....	30-97
Test oil leakage .....	30-99
Bleed air from hydraulic system .....	30-104
CAB RELATED PARTS .....	30-109
Test cab tipping stopper .....	30-109
ADJUST MIRRORS .....	30-110
ELECTRICAL SYSTEM .....	30-115
SETTING AND OPERATION OF MACHINE MONITOR .....	30-115
START UP KOMTRAX TERMINAL .....	30-178
Adjust rearview camera angle .....	30-182
ENGINE CONTROLLER VOLTAGE CIRCUIT .....	30-184
TEST DIODES .....	30-185
Pm-CLINIC .....	30-186
PM CLINIC SERVICE .....	30-186
40 TROUBLESHOOTING .....	40-1
ABBREVIATION LIST .....	40-2
CONTENTS .....	40-7
RELATED INFORMATION TO TROUBLESHOOT .....	40-13
PRECAUTIONS FOR TROUBLESHOOTING .....	40-13
SEQUENCE OF EVENTS IN TROUBLESHOOTING .....	40-14
CHECKS BEFORE TROUBLESHOOTING .....	40-16
INSPECTION PROCEDURE BEFORE TROUBLESHOOTING .....	40-18
CONNECT ADAPTER TO TROUBLESHOOT CONTROLLER .....	40-27
DISCONNECT AND CONNECT CONNECTOR WITH LOCK TO PUSH .....	40-38
DISCONNECT AND CONNECT CONNECTOR WITH LOCK TO PULL .....	40-41
DISCONNECT AND CONNECT SLIDE TYPE CONNECTOR .....	40-42
DISCONNECT AND CONNECT CONNECTOR WITH HOUSING TO ROTATE .....	40-44
PROCEDURE FOR TROUBLESHOOTING .....	40-45
INFORMATION DESCRIBED IN TROUBLESHOOTING .....	40-46
DIAGNOSE OPEN CIRCUIT OF HYDRAULIC PRESSURE SENSOR SYSTEM WIRING HARNESS .....	40-49
CONNECTOR AND WIRING HARNESS IDENTIFICATION TABLE .....	40-52
CONNECTOR LAYOUT .....	40-126
CONNECTOR CONTACT IDENTIFICATION .....	40-132
T-BRANCH BOX AND T-BRANCH ADAPTER TABLE .....	40-174
FUSE LOCATION AND CONNECTION TABLE .....	40-180
DRAWING OF SHORT CIRCUIT ELECTRICAL CONNECTOR FOR TROUBLESHOOTING .....	40-183
FAILURE CODES TABLE .....	40-185
TROUBLESHOOTING BY FAILURE CODE (DISPLAY OF CODE) .....	40-193
FAILURE CODE [602KNX] .....	40-193

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$