

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210 -11

PC210LC -11

SERIAL NUMBERS 50007 and up
 K70001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-19
HOW TO READ THE SHOP MANUAL	00-19
SAFETY NOTICE FOR OPERATION	00-21
PRECAUTIONS TO PREVENT FIRE	00-29
ACTIONS IF FIRE OCCURS	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-32
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-33
PRECAUTIONS FOR DEF	00-34
STORE AdBlue/DEF	00-35
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-36
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-38
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-44
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-46
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-47
PRACTICAL USE OF KOMTRAX	00-48
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-49
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-53
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-63
HOW TO READ ELECTRICAL WIRE CODE	00-64
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-68
ABBREVIATION LIST	00-71
STANDARD TIGHTENING TORQUE TABLE	00-76
CONVERSION TABLE	00-83
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-4
SPECIFICATIONS	01-5
WEIGHT TABLE	01-8
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-10
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM	10-7
UREA SCR SYSTEM DIAGRAM	10-12
FUNCTION OF UREA SCR SYSTEM	10-13
COMPONENT PARTS OF UREA SCR SYSTEM	10-23
BOOT-UP SYSTEM	10-32
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-32
SYSTEM OPERATING LAMP SYSTEM	10-34
BATTERY DISCONNECT SWITCH	10-35
ENGINE SYSTEM	10-36
LAYOUT DRAWING OF ENGINE SYSTEM	10-36
ENGINE CONTROL SYSTEM	10-38
AUTO-DECELERATION SYSTEM	10-41
ENGINE AUTOMATIC WARM-UP SYSTEM	10-43
OVERHEAT PREVENTION SYSTEM	10-45
TURBOCHARGER PROTECTION SYSTEM	10-48
AUTOMATIC IDLE STOP SYSTEM	10-50

COMPONENT PARTS OF ENGINE SYSTEM	10-53
COOLING SYSTEM.....	10-70
LAYOUT DRAWING OF COOLING SYSTEM	10-70
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-72
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-74
COMPONENT PARTS OF COOLING SYSTEM.....	10-76
CONTROL SYSTEM.....	10-77
LAYOUT DRAWING OF CONTROL SYSTEM	10-77
MACHINE MONITOR SYSTEM	10-80
KOMTRAX SYSTEM.....	10-81
PPC LEVERS	10-82
AUTOMATIC GREASE SYSTEM	10-84
COMPONENT PARTS OF CONTROL SYSTEM.....	10-99
.....	10-128
HYDRAULIC SYSTEM.....	10-132
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-132
CLSS	10-138
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-156
PUMP AND VALVE CONTROL SYSTEM	10-162
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-165
WORK EQUIPMENT SYSTEM	10-250
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-250
STRUCTURE OF VALVE CONTROL.....	10-255
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-257
PPC LOCK SYSTEM	10-259
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-260
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-262
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-265
SWING SYSTEM.....	10-291
LAYOUT DRAWING OF SWING SYSTEM	10-291
SWING CONTROL SYSTEM DIAGRAM	10-295
COMPONENT PARTS OF SWING SYSTEM.....	10-299
TRAVEL SYSTEM.....	10-313
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-313
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-317
COMPONENT PARTS OF TRAVEL SYSTEM	10-319
UNDERCARRIAGE AND FRAME.....	10-340
LAYOUT DRAWING OF UNDERCARRIAGE	10-340
WORK EQUIPMENT.....	10-342
STRUCTURE OF WORK EQUIPMENT	10-342
FUNCTION OF WORK EQUIPMENT	10-343
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-344
BUCKET CLEARANCE ADJUSTMENT SHIM	10-345
CAB AND ITS ATTACHMENTS	10-346
ROPS CAB	10-346
CAB MOUNT	10-347
CAB TIPPING STOPPER	10-348
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC210-11, PC210LC-11.....	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-7
STANDARD VALUE TABLE FOR MACHINE: PC210-11, PC210LC-11.....	20-7
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-20
STANDARD VALUE TABLE FOR ELECTRICAL	20-24
STANDARD VALUE TABLE FOR ELECTRICAL	20-24
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$