

Shop Manual

HYDRAULIC
EXCAVATOR

GALEO

PC228US -3E0

PC228USLC -3E0

SERIAL NUMBERS PC228US- 40001 and up
PC228USLC-40001

KOMATSU

HYDRAULIC EXCAVATOR

PC228US-3E0 PC228USLC-3E0

Machine model	Serial number
---------------	---------------

PC228US-3E0	40001 and up
PC228USLC-3E0	40001 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN01418-04 ●
00 Index and foreword	
Index	UEN01420-04 ●
Foreword and general information	UEN01421-00
01 Specification	
Specification and technical data	UEN01423-00
10 Structure, function and maintenance standard	
Engine and cooling system	UEN01425-00
Power train	UEN01426-00
Undercarriage and frame	UEN01427-00
Hydraulic system, Part 1	UEN01428-00
Hydraulic system, Part 2	UEN01429-00
Hydraulic system, Part 3	UEN01430-01
Work equipment	UEN01431-00
Cab and its attachments	UEN01432-00
Electrical system	UEN01433-00
20 Standard value table	
Standard service value table	UEN01441-00
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN01879-00
Testing and adjusting, Part 2	UEN01880-01
Testing and adjusting, Part 3	UEN01881-00
40 Troubleshooting	
Failure code table and fuse locations	UEN01882-00
General information on troubleshooting	UEN01883-00
Troubleshooting by failure code (Display of code), Part 1	UEN01884-00
Troubleshooting by failure code (Display of code), Part 2	UEN01885-00
Troubleshooting by failure code (Display of code), Part 3	UEN01886-00
Troubleshooting by failure code (Display of code), Part 4	UEN01887-00
Troubleshooting of electrical system (E-mode)	UEN01888-00

Troubleshooting of hydraulic and mechanical system (H-mode)	UEN01889-01
Troubleshooting of engine (S-mode)	UEN01890-00
50 Disassembly and assembly	
General information on disassembly and assembly	UEN01923-00
Engine and cooling system	UEN01924-00
Power train	UEN01925-00
Undercarriage and frame	UEN01926-00
Hydraulic system	UEN01927-01
Work equipment	UEN01928-00
Cab and its attachments	UEN01929-00
Electrical system	UEN01930-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN01439-01 ●
Electrical diagrams and drawings	UEN01440-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$