

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC228US -8**

**PC228USLC-8**

SERIAL NUMBERS PC228US- 50001 and up  
PC228USLC-50001

**ecot3**

**KOMATSU**



# **SHOP MANUAL**

---

# **HYDRAULIC EXCAVATOR PC228US-8 PC228USLC-8**

**Machine model      Serial number**

PC228US-8	50001 and up
PC228USLC-8	50001 and up

---

## **00 Index and foreword**

---

---

## Table of Contents

00 Index and Foreword	
Table of Contents.....	00 - 2
Table of Contents.....	00 - 2
Foreword and general information .....	00- 4
Safety notice .....	00- 4
How to read the shop manual .....	00- 9
Explanation of terms for maintenance standard .....	00- 11
Handling of hydraulic components.....	00- 13
Method of disconnecting and connecting push-pull type coupler .....	00- 15
Handling of electric equipment.....	00- 18
How to read electric wire code.....	00- 28
Precautions when performing work.....	00- 31
Standard tightening torque table.....	00- 34
List of Abbreviation .....	00- 38
Conversion table.....	00- 42
01 Specification	
Specifications.....	01- 4
Specifications drawing .....	01- 4
Working range diagram.....	01- 5
Specifications.....	01- 6
Table of weight.....	01- 16
Table of fuel, coolant and lubricants .....	01- 20
10 Structure and function	
Engine and cooling system .....	10- 3
Engine related parts.....	10- 3
Cooling system .....	10- 4
Power train system .....	10- 7
Power train.....	10- 7
Swing circle.....	10- 8
Swing machinery.....	10- 10
Final drive .....	10- 12
Undercarriage and frame .....	10- 14
Track frame and idler cushion.....	10- 14
Hydraulic system.....	10- 16
Hydraulic equipment layout drawing .....	10- 16
Valve control .....	10- 18
Hydraulic tank .....	10- 19
CLSS.....	10- 21
Main pump .....	10- 26
Control valve .....	10- 48
Function and operation by valve .....	10- 60
Swing motor .....	10- 97
Travel motor.....	10-105
PPC valve .....	10-115
Solenoid valve.....	10-132
Attachment circuit selector valve .....	10-138
Anti-drop valve .....	10-142
Multi-control valve.....	10-147
Center swivel joint.....	10-148
Accumulator .....	10-149

Work equipment.....	10- 152
Work equipment.....	10- 152
Electrical system.....	10- 154
Electronic control system.....	10- 154
Machine monitor system.....	10- 192
KOMTRAX system.....	10- 208
Sensors.....	10- 210
20 Standard value table	
Standard value table.....	20- 3
Standard value table for engine.....	20- 3
Standard value table for machine.....	20- 4
30 Testing and adjusting	
Tool for testing, adjusting and troubleshooting.....	30- 3
Tools for testing, adjusting, and troubleshooting.....	30- 3
Engine and cooling system.....	30- 7
Testing engine speed.....	30- 7
Testing intake air pressure (boost pressure).....	30- 8
Testing exhaust gas color.....	30- 9
Testing and adjusting valve clearance.....	30- 10
Testing compression pressure.....	30- 12
Testing blowby pressure.....	30- 15
Testing engine oil pressure.....	30- 16
Handling fuel system parts.....	30- 17
Releasing remaining pressure from fuel system.....	30- 18
Testing fuel pressure.....	30- 19
Cylinder cut-out test mode.....	30- 22
No-injection cranking.....	30- 23
Checking fuel delivery, return rate and leakage.....	30- 24
Bleeding air from fuel circuit.....	30- 27
Testing fuel circuit for leakage.....	30- 28
Testing and adjusting air conditioner compressor belt tension.....	30- 29
Replacing fan belt.....	30- 30
Undercarriage and frame.....	30- 31
Testing swing circle bearing clearance.....	30- 31
Checking and adjusting track tension.....	30- 32
Hydraulic system.....	30- 33
Testing and adjusting oil pressure in work equipment, swing and travel circuits.....	30- 33
Testing control circuit source pressure.....	30- 37
Testing and adjusting oil pressure in pump PC control circuit.....	30- 38
Testing and adjusting oil pressure in pump LS control circuit.....	30- 42
Testing solenoid valve output pressure.....	30- 47
Testing PPC valve output pressure.....	30- 50
Adjusting play of work equipment and swing PPC valves.....	30- 52
Testing pump swash plate sensor.....	30- 53
Isolating the parts causing hydraulic drift of work equipment.....	30- 54
Releasing remaining pressure from hydraulic circuit.....	30- 56
Testing oil leakage amount.....	30- 57
Bleeding air from each part.....	30- 59
Testing and charging accumulator (manufactured by NOK) nitrogen gas pressure for attachment (low pressure side).....	30- 60-1
Testing and charging accumulator nitrogen gas pressure for attachment (high pressure side).....	30- 60-3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$