

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**PC290 -11E0**

**PC290LC -11E0**

**PC290NLC-11E0**

**SERIAL NUMBERS**

**PC290LC-11E0 - K75001 ~ K75244**

**PC290NLC-11E0 - K75001 ~ K75245**

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-20
FOREWORD, SAFETY, BASIC INFORMATION .....	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS .....	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-40
METHOD FOR CHECKING ENGINE TYPE .....	00-41
PRECAUTIONS FOR DEF.....	00-43
STORE AdBlue/DEF .....	00-44
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-45
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-48
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-55
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-57
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-58
PRACTICAL USE OF KOMTRAX .....	00-59
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-60
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-64
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-68
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-74
HOW TO READ ELECTRICAL WIRE CODE .....	00-75
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-79
STANDARD TIGHTENING TORQUE TABLE.....	00-82
CONVERSION TABLE .....	00-89
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-13
UREA SCR SYSTEM DIAGRAM .....	10-18
FUNCTION OF UREA SCR SYSTEM.....	10-19
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-42
BOOT-UP SYSTEM.....	10-51
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-51
SYSTEM OPERATING LAMP SYSTEM .....	10-53
BATTERY DISCONNECT SWITCH .....	10-55
ENGINE SYSTEM .....	10-56
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-56
ENGINE CONTROL SYSTEM .....	10-58
AUTO-DECELERATION SYSTEM.....	10-61
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-63

OVERHEAT PREVENTION SYSTEM .....	10-65
TURBOCHARGER PROTECTION SYSTEM .....	10-68
AUTOMATIC IDLE STOP SYSTEM .....	10-70
COMPONENT PARTS OF ENGINE SYSTEM .....	10-73
COOLING SYSTEM.....	10-91
LAYOUT DRAWING OF COOLING SYSTEM .....	10-91
CONTROL SYSTEM.....	10-93
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-93
MACHINE MONITOR SYSTEM .....	10-96
KomVision SYSTEM .....	10-97
KOMTRAX SYSTEM.....	10-101
PPC LEVERS .....	10-102
AUTOMATIC GREASE SYSTEM .....	10-104
COMPONENT PARTS OF CONTROL SYSTEM.....	10-119
HYDRAULIC SYSTEM.....	10-161
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-161
CLSS .....	10-167
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-186
PUMP AND VALVE CONTROL SYSTEM .....	10-192
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-195
WORK EQUIPMENT SYSTEM .....	10-280
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-280
STRUCTURE OF VALVE CONTROL .....	10-285
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-287
PPC LOCK SYSTEM .....	10-289
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-290
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-292
TOOL CONTROL SYSTEM .....	10-295
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-297
SWING SYSTEM .....	10-326
LAYOUT DRAWING OF SWING SYSTEM .....	10-326
SWING CONTROL SYSTEM DIAGRAM .....	10-330
COMPONENT PARTS OF SWING SYSTEM.....	10-334
TRAVEL SYSTEM.....	10-349
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-349
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-353
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-355
UNDERCARRIAGE AND FRAME.....	10-376
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-376
WORK EQUIPMENT.....	10-378
STRUCTURE OF WORK EQUIPMENT .....	10-378
FUNCTION OF WORK EQUIPMENT .....	10-379
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-380
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-381
CAB AND ITS ATTACHMENTS .....	10-382
ROPS CAB .....	10-382
CAB MOUNT .....	10-383
CAB TIPPING STOPPER .....	10-384
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC290LC-11E0, PC290NLC-11E0.....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC290LC-11E0, PC290NLC-11E0 .....	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-26
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$