

Shop Manual

HYDRAULIC
EXCAVATOR

PC290LC-10

SERIAL NUMBERS 15001 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC290LC - 10

Model Serial Number

PC290LC - 10 15001 and up

00 Index and foreword

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual.....	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts.....	00-26
Handling of hydraulic equipment.....	00-27
Method of disconnecting and connecting of push-pull type coupler	00-29
Handling of electrical equipment.....	00-32
How to read electric wire code	00-40
Precautions when performing operation	00-43
Practical use of KOMTRAX	00-48
Standard tightening torque table.....	00-49
List of abbreviation	00-55
Conversion table	00-60
01 Specification.....	01-1
Table of contents	01-2
Specifications	01-3
Specification drawings.....	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-9
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system.....	10-3
Engine related parts	10-3
KVTG.....	10-5
EGR system piping drawing.....	10-12
EGR system circuit diagram.....	10-14
EGR valve.....	10-16
EGR cooler.....	10-18
KCCV layout drawing	10-20
KCCV ventilator	10-22
KDPF.....	10-24
Cooling system	10-28
Power train.....	10-30
Power train system.....	10-30
Swing circle	10-32
Swing machinery	10-33
Final drive	10-35
Undercarriage and frame.....	10-37
Track frame and idler cushion	10-37
Hydraulic system	10-39
Hydraulic equipment layout drawing	10-39
Valve control.....	10-41
Hydraulic tank.....	10-43
CLSS	10-45
Main pump	10-50
Control valve	10-74
Swing motor	10-128
Travel motor	10-139
PPC valve	10-153
Solenoid valve	10-174
Attachment circuit selector valve (for high pressure circuit)	10-177
Attachment circuit selector valve (for low pressure circuit).....	10-179
Center swivel joint.....	10-182
Accumulator	10-184

Work equipment	10-185
Work equipment.....	10-185
Work equipment shim.....	10-186
Bucket play adjustment shim.....	10-187
Cab and its attachments.....	10-188
Cab mount and cab tipping stopper	10-188
ROPS cab	10-189
Electrical system	10-190
Electrical control system	10-190
Machine monitor system.....	10-234
KOMTRAX system.....	10-254
Sensor	10-256
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine related parts.....	20-3
Standard value table for chassis related parts.....	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-7
Engine and cooling system.....	30-9
Testing engine speed	30-9
Testing boost pressure	30-10
Testing exhaust gas color	30-11
Testing mass air flow and temperature sensor	30-12-2
Testing and adjusting valve clearance.....	30-13
Testing compression pressure.....	30-16
Measuring blowby pressure	30-20
Measuring engine oil pressure.....	30-21
Measuring EGR valve and KVGT oil pressure.....	30-22
Measuring fuel pressure	30-23
Measuring fuel delivery, return and leakage.....	30-29
Bleeding air from fuel system	30-34
Testing fuel circuit for leakage	30-36
Handling cylinder cutout mode operation.....	30-37
Handling no-injection cranking operation.....	30-38
Testing and adjusting air conditioner compressor belt tension	30-39
Replacing fan belt	30-40
Power train.....	30-41
Testing swing circle bearing clearance	30-41
Undercarriage and frame.....	30-42
Testing and adjusting track tension	30-42
Hydraulic system	30-43
Releasing remaining pressure from hydraulic circuit.....	30-43
Measuring and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-44
Testing oil pressure in control circuit.....	30-48
Testing and adjusting oil pressure in pump PC control circuit.....	30-49
Testing and adjusting oil pressure in pump LS control circuit	30-52
Testing output pressure of solenoid valve	30-57
Measuring PPC valve output pressure	30-61
Adjusting play of work equipment and swing PPC valves.....	30-63
Testing pump swash plate sensor.....	30-64
Isolating the parts causing hydraulic drift in work equipment.....	30-65
Testing oil leakage	30-67
Bleeding air from hydraulic circuit	30-70
Testing and charging accumulator (manufactured by NOK) nitrogen gas pressure for attachment (low pressure side)	30-71-1
Testing and charging accumulator nitrogen gas pressure for attachment (high pressure side)	30-71-3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$